



# ***LINC PANORAY***

---

**2021 OWNER'S MANUAL**

**FOR SELECT SUPER AIR NAUTIQUE MODELS**

# LINC PANORAY

---

## TABLE OF CONTENTS

### OVERVIEW

Product Information	5
Care and Maintenance	5
Touchscreen Display	6
Helm Command	7
User Interface	
•Split Interface Mode	9
•General Layout	10-11
•Fullscreen Mode and Layout	13
Using Helm Command	
•Rotary Knob	14-19
•Button Shortcuts	20
•Volume Button	21
•User Button	22-24
•Speed Button	25
•Tab Button	26
•Home Button	27

### HOME MENU

Main Tab	28-31
•Surf Speeds	28
•Wakeboard Speeds	29
•Ski Speeds (GS Series Only)	30
Status Tab	32
River Mode Tab	33-35
Steering Assist Tab (Optional)	36-39

### AUDIO MENU

Main Tab	40-41
Dynamic Source Tab	42-43
Zone Control Tab	44
Audio Setup Tab	45-46

### GOPRO MENU

Control Tab	48
Settings Tab	49-53
•Connecting a GoPro Camera	50-53
Gallery Tab	54-55

# LINC PANORAY

---

### BALLAST MENU

Manual Tab	56
Set Level Tab	57
Overhead Tab (with Ballast Shift)	59

### SWITCHING MENU

Lights Tab	60
Courtesy Color Tab (Optional)	61-63
Climate Tab	64
Features Tab	65

### MAP MENU

Mini Map Tab	66
Full Map Tab	67-69
•Waypoints and Tracks	68-69

### PREFERENCES MENU

Settings Tab	70
Display Tab	71
System Tab	72-75
•Power Diagnostics	73
•Engine Diagnostics	74
•System Info	75

### RIGHT SECTION

Switchboard Tab	76-79
•Editing the Functions	77-79
Vitals Tab	80

### WARNINGS AND POP UP MESSAGE

Engine Diagnostic Message	82
Circuit Fault Message	83



## OVERVIEW



## PRODUCT INFORMATION

The Nautique LINC 3.0 system is designed for instrumentation and control on electronically controlled engines communicating via SAE J1939 and NMEA 2000. The display is a multifunctional tool that provides GPS tracking, multimedia display, speed control, and enables equipment operators to view many different engine parameters and service codes.

## CARE AND MAINTENANCE

General maintenance is not required; however, a soft cloth can be used for cleaning the unit. Window cleaner or alcohol can also be used to clean the glass portion of the display. Do not use harsh or abrasive cleaners on the unit.



## OVERVIEW



### TOUCHSCREEN DISPLAY

LINC Panoray features a 12.4" wide touchscreen display. Operators can easily change settings and viewed information by tapping certain touch-point icons on the screen. When the display recognizes that the operator has touched the screen, a small, grey, circular graphic will appear at the location where the operator has touched.

Operators can also scroll and swipe certain functions, lists and menus on the touchscreen display.

To ensure proper use, make sure that hands and fingers are dry and clean of any oils or lotions before touching the display.



## OVERVIEW



### HELM COMMAND

In addition to the touchscreen, the LINC 3.0 interface can also be fully controlled with the Helm Command (pictured above) located on the driver's armrest adjacent to the throttle arm.


Helm Command features a machined, aluminum knob. This knob is able to 1) rotate clockwise and counterclockwise, 2) tilt up, down, left and right like a joystick and 3) can be pressed down like a button. The functions of each of the three physical actions listed above can change depending on the particular menu that is displayed.

A black, rubber keypad surrounds the knob with 5 different buttons. These buttons act like shortcuts, or hot keys, and allow the user to quickly jump to certain menus, tabs and frequently used settings.

Please refer to the following pages for a step-by-step instruction on how to use Nautique's Helm Command with the user interface.



## OVERVIEW

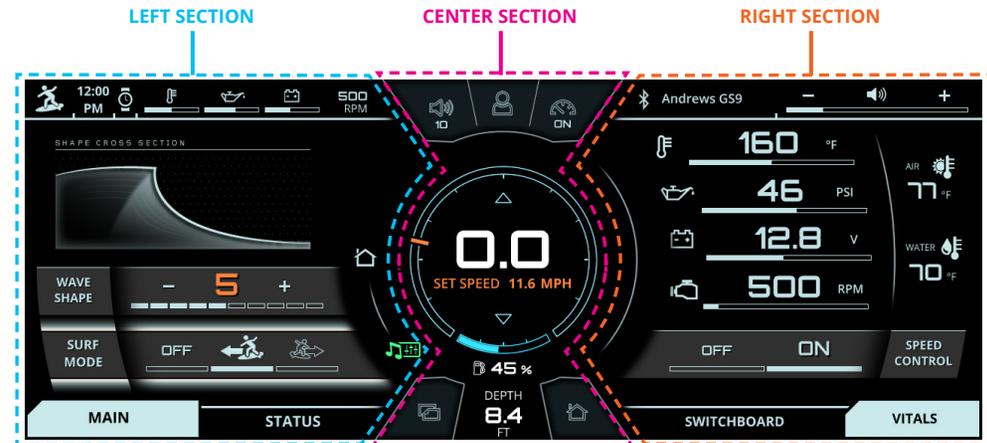

## USER INTERFACE - SPLIT INTERFACE MODE

In most circumstances, the LINC Panoray interface is split into three, broad visual sections; the center section, the left section and the right section.


**CENTER SECTION** - displays critical gauges, settings and functions (e.g. speed, speed control on/off) that can be seen at a glance under most scenarios.

**LEFT SECTION** - displays specific, detailed information and functions which is dictated mostly by the currently selected menu and menu tab. The operator should use this section when he/she wants to take their time and get an “in-depth” look into certain boat settings or features. For example, if an operator wants to change individual audio settings, he/she should look at the left side of the screen, navigate to the audio menu and select the proper menu tab to adjust specific audio settings.

**RIGHT SECTION** - also displays information and functions, but is meant for quicker operation. The right section does not use menus and contains only two tabs at all times: the vitals tab and the switchboard tab. The vitals tab contains vital engine gauges and information and the switchboard tab contains 4 different functions that can be customized by the user (see pages 62-65). The switchboard tab allows the operator to select his/her four favorite functions so that they can be quickly adjusted (or turned on/off) from the right side without having to navigate to any left side menus. Think of the switchboard tab as if it were containing “shortcuts” to an operator’s most used/viewed features.



## OVERVIEW

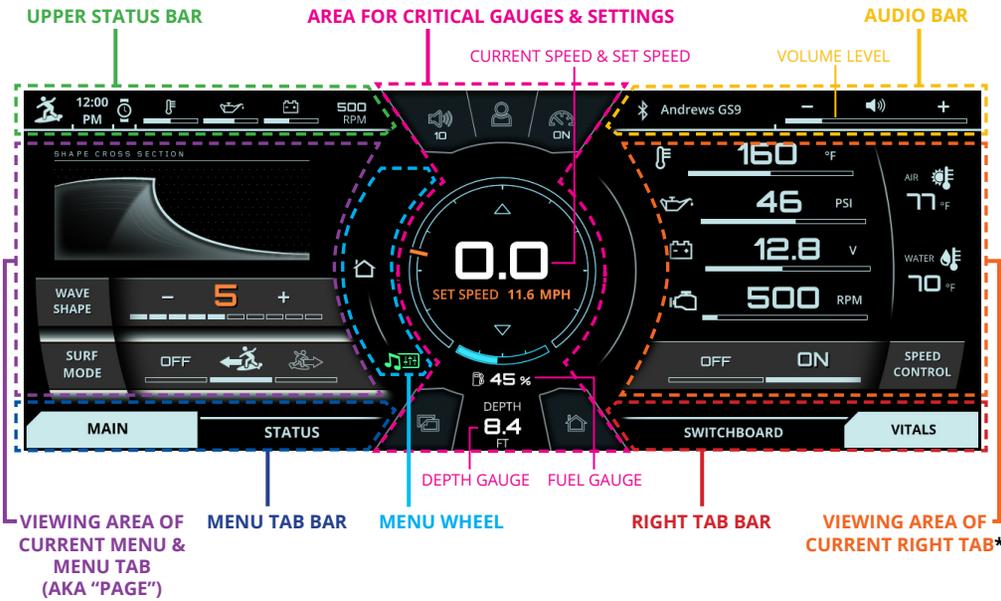

## USER INTERFACE - GENERAL LAYOUT

**AREA FOR CRITICAL GAUGES & SETTINGS** - This area displays the current speed, set speed, speed control on/off, fuel gauge, and depth gauge. This area also duplicates the 5 buttons on the Helm Command.

**UPPER STATUS BAR** - This area always displays the activated User Profile, time, engine temperature, oil pressure, voltage, and RPM. The operator can tap on the engine temperature, oil pressure, or voltage for a numerical readout of that particular gauge. This area can also display an icon for Surf Select if that setting is turned on.

**MENU WHEEL** - Different menus can be selected here by tapping individual menu icons or by rotating the Helm Command knob if the Menu Wheel is highlighted. There can be up to 8 menus: Home, Audio, Video, Ballast, Switching, User, Map, and Preferences. The middle icon of the Menu Wheel shows which menu is currently being viewed.

**MENU TAB BAR** - This tab bar changes depending on the current menu. Each tab contains a separate page of information that relates back to the current menu. Menus contain either 2, 3 or 4 unique tabs.



## OVERVIEW

### USER INTERFACE - GENERAL LAYOUT (CONTINUED)

**VIEWING AREA OF CURRENT MENU & MENU TAB (AKA "PAGE")** - Each tab under each menu displays unique information, settings, and functions in this area (which can be referred to as a "page"). Most settings and functions are illustrated here as a stack-up of smaller horizontal bars with curved ends.

**AUDIO BAR** - This area always displays the current stereo source and the volume level of the audio system. Tapping the + or the - on the volume level will increase or decrease the volume. Tapping the volume horn icon will mute or unmute the audio system.


**RIGHT TAB BAR** - This tab bar always features two tabs: the switchboard tab and the vitals tab. The switchboard tab features 4 functions that can be customized by a user (see pages 62-65). The vitals tab (shown in the screenshot) displays all of the vital engine gauges and system information for the boat in a large, easy to read format. This includes engine temperature, engine oil pressure, battery charging voltage, engine RPM, air temperature and water temperature. The vitals tab also includes the Speed Control On/Off so that users can quickly turn that on or off as needed.

**VIEWING AREA OF CURRENT RIGHT TAB** - this area will display information, settings, and functions from the switchboard tab or the vitals tab, whichever is selected.

**\*NOTE:** Certain menus and menu tabs from the left side may temporarily occupy this space when there are more than 5 functions or settings.



## OVERVIEW

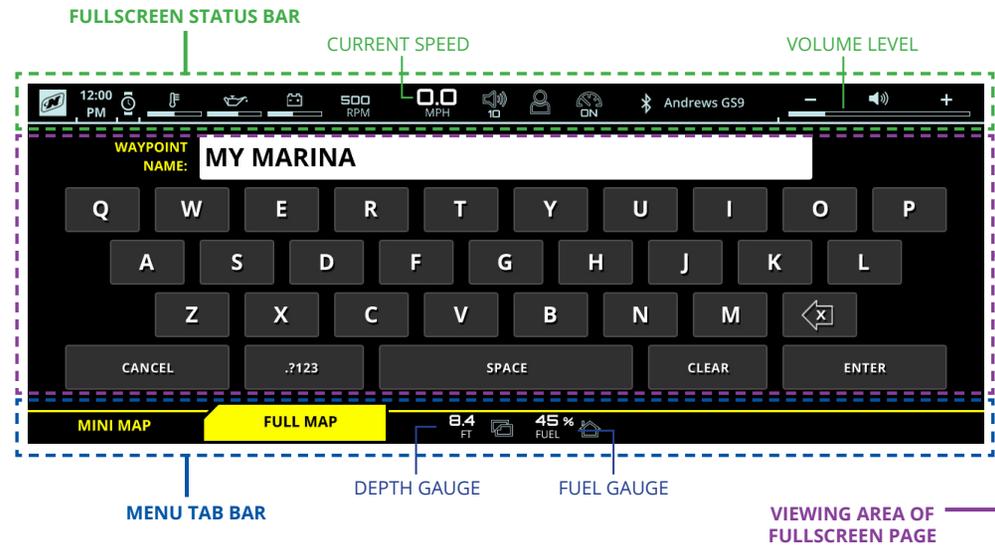

## USER INTERFACE - FULLSCREEN MODE AND LAYOUT

Some menus and menu tabs will adjust the appearance of the user interface in order to increase the viewing area of certain features; these are called “fullscreen pages”. Examples of full screen pages include the following:

- Instances when a keyboard is required (e.g. when creating a name)


- Map Menu - Full Map tab

- Preferences Menu - System tab, diagnostic pages and dealer menu pages

Full screen pages will slightly re-position critical gauges and settings to the top and bottom of the screen. Current speed and volume level move to the top in the **FULLSCREEN STATUS BAR** whereas the depth and fuel gauges move to the bottom in the **MENU TAB BAR**.



## OVERVIEW

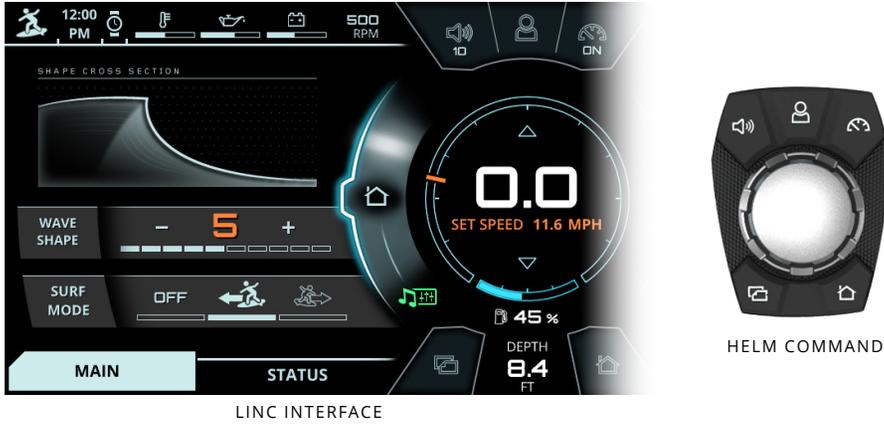

## USING HELM COMMAND - ROTARY KNOB

When LINC 3.0 has completed its start-up sequence, a “highlight” will appear over the Menu Wheel. This highlight is similar to a computer cursor; it shows the current position for user interaction and it will respond to input from the rotary knob or the 5 buttons on the Helm Command unit. The highlight will stay in the same location until it is moved to a new function/setting or until a new menu or menu tab is selected.

When the highlight is over the Menu Wheel, simply rotate the Helm Command knob clockwise or counter-clockwise to view another menu (see fig. A1 below).



FIG. A1 - ROTATING CLOCKWISE FROM THE HOME MENU TO THE MEDIA MENU



## OVERVIEW

### USING HELM COMMAND - ROTARY KNOB (CONTINUED)

To return to a previously viewed menu, simply rotate the knob the opposite way. The menu will appear with the tab that was last selected (see Fig. A2 below).



FIG. A2 - ROTATING COUNTER-CLOCKWISE BACK TO THE HOME MENU FROM THE MEDIA MENU

To move the highlight to the page area of the screen (to the left side), the operator can either press down on the knob or can joystick over to the left. (See Fig. A3 below)



FIG. A3 - MOVING THE HIGHLIGHT TO THE PAGE AREA



## OVERVIEW

### USING HELM COMMAND - ROTARY KNOB (CONTINUED)

After moving the highlight to the page area, the operator can select functions/settings by pushing down on the knob. (see Fig. D below). This will change the background color behind the function/setting to white to increase visibility over the other functions/settings.



FIG. A4 - PUSHING DOWN TO SELECT A SETTING (THE WAVE SHAPE SETTING IN THIS EXAMPLE)

When a setting is selected, simply rotate clockwise or counter-clockwise to increase or decrease that setting. In Fig. A5 below, the operator has rotated clockwise twice to increase the Wave Shape Setting to "7".

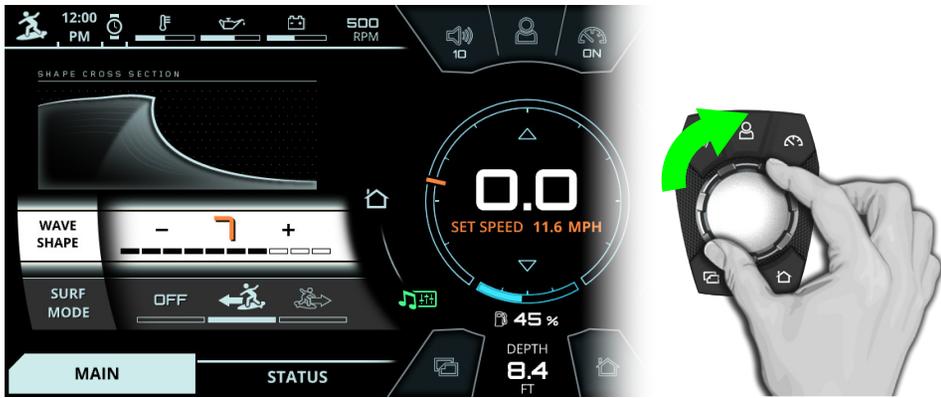


FIG. A5 - ROTATING CLOCKWISE TO INCREASE A SETTING



## OVERVIEW

### USING HELM COMMAND - ROTARY KNOB (CONTINUED)

When the operator is comfortable with where the setting is at, he/she may push down on the knob to de-select from the setting (see Fig. A6 below).



FIG. A6 - PUSHING DOWN TO DE-SELECT A SETTING (THE WAVE SHAPE SETTING IN THIS EXAMPLE)

The operator may now rotate the knob to highlight another setting. In the image below (Fig. A7) the operator has rotated counter-clockwise once to highlight the Surf Mode Setting



FIG. A7 - ROTATING COUNTER-CLOCKWISE TO HIGHLIGHT A DIFFERENT SETTING



## OVERVIEW

### USING HELM COMMAND - ROTARY KNOB (CONTINUED)

Once again, an operator can select functions/settings by pushing down on the knob; in Fig H. below the operator has selected the Surf Mode setting.



FIG. A8 - PUSHING DOWN TO SELECT A SETTING (SURF MODE SETTING IN THIS EXAMPLE)

Certain settings can be turned On, Off or set to a specific state. The Surf Mode setting allows the operator to select three different states: OFF, Surf Wave activated on the Port side, or the Surf Wave activated on the Starboard side. In the example below, the operator has rotated once to activate the Surf Wave on the Starboard side.



FIG. A9 - ROTATING CLOCKWISE TO CHANGE SURF WAVE TO THE STARBOARD SIDE



## OVERVIEW

### USING HELM COMMAND - ROTARY KNOB (CONTINUED)

As mentioned previously, when the operator is comfortable with where the setting is at, he/she may push down on the knob to de-select from that setting (see example below).



FIG. A10 - PUSHING DOWN TO DE-SELECT A SETTING (THE SURF MODE SETTING IN THIS EXAMPLE)



## OVERVIEW

### USING HELM COMMAND - BUTTON SHORTCUTS

A black, rubber keypad surrounds the knob with 5 different buttons. These buttons act like shortcuts, or hot keys, and allow the user to quickly jump to certain menus, tabs and frequently used settings.



The Volume, User and Speed Control buttons will each open up a unique pop-up menu when pressed. Each of those pop-up menus will close when that same button is pressed again.



## OVERVIEW

### USING HELM COMMAND - VOLUME BUTTON

Pressing the Volume button opens a pop-up to allow the operator to quickly change the volume and the track from any menu (see Fig. B1).



FIG. B1 - POP-UP AFTER PRESSING THE VOLUME BUTTON ON HELM COMMAND

Once the Volume pop-up appears in the center of the screen, the operator can perform the following functions:

**Changing the Volume** - by either rotating the Helm Command knob either direction or by pressing the plus and minus icons via touchscreen

**Pause/Play (or Mute/Un-mute)** - by pressing down on the Helm Command knob or by pressing the pause icon via touchscreen.

**Changing the Track (or Frequency)** - by either joysticking the Helm Command knob either left or right, or by pressing the next track and previous track icons via touchscreen

**NOTE:** If the "stereo is off" is listed in this pop-up, simply press down on the knob to turn the stereo on.



## OVERVIEW

### USING HELM COMMAND - USER BUTTON



FIG. B2 - POP-UP MENU AFTER PRESSING THE USER BUTTON ON HELM COMMAND

Pressing the User button opens a pop-up menu for the User Menu. The User Menu displays editable user profiles which contain pre-set speed, wave/wake shape, and ballast settings. This pop-up menu can be accessed at any time.

The Interaction display comes with 9 pre-loaded user profiles and the ability to create 7 additional user profiles. The operator may edit or delete all of the pre-loaded user profiles except for "Back to Dock". It is recommended to try out factory pre-loaded user profiles first before attempting to edit settings or create user profiles from scratch. The factory pre-loaded profiles are a great way to gain an understanding of how different key settings (speed, shape, ballast, etc.) impact the wake behind the boat.

When the User pop-up menu appears (either by Helm Command or touchpoint) the operator will see a scrolling list of options and user profiles to the left and will see the corresponding user profile settings displayed graphically on the right.

On the User pop-up menu the operator can perform the following functions:



## OVERVIEW

### USING HELM COMMAND - USER BUTTON



FIG. B3 - POP-UP MENU AFTER PRESSING THE USER BUTTON ON HELM COMMAND

**Exit** - This will exit out of the User drop down menu and return to the previous screen.

**Save Changes** - This will save any altered settings of the currently selected profile, which are noted by blue "!" icons on the right side of the menu (e.g. the set speed setting on the image above).

**Create New User** - Selecting this will bring up a new list to select individual settings for a new user.

**Selecting a different user profile** - Each user profile will feature an icon and its unique name. The operator can see settings for each profile as he/she scrolls through the list. When a user profile is highlighted, pressing in on the Helm Command knob will then bring up additional actions to choose from (see image above), including activate user, edit user, and delete user (trash icon). Selecting edit user will bring up the list of the individual settings for that user that can be changed.

Please see the following pages for instructions on how to edit an existing user profile and how to create a new user profile.



## OVERVIEW

### USING HELM COMMAND - USER BUTTON (CONTINUED)



FIG. B4 - POP-UP MENU AFTER PRESSING THE USER BUTTON ON HELM COMMAND

The image above illustrates what the User pop-up menu looks like when editing an existing user profile or creating a new user profile.

Editing a user profile allows the operator to change each individual setting for the user profile, including the name, the icon, set speed, wave/wake shape settings, and individual ballast tank levels. These settings appear in a scrolling list and the operator may have to scroll all the way to the bottom to access all of the settings. If adjusting a user profile that is at Wakesurf speeds (below 13.0 mph or 20.9 kph), then the additional setting of "Surf Side" will appear in this list as well.

When editing the user profile name, a full keyboard will appear on the right side. This keyboard will stay displayed until the operator presses "Enter" to accept the changes to the name, and then it will change back to the graphical preview of settings.

When individual settings are adjusted, the operator will see the corresponding settings change graphically on the right side.

When finished, either press "cancel" to cancel out of the new user process or press "Save Changes" to save the newly created user profile and return to the User List tab.



## OVERVIEW

### USING HELM COMMAND - SPEED CONTROL BUTTON

Pressing the Speed Control button opens a pop-up to allow the operator to quickly change the set speed from any menu (see Fig. B3).



FIG. B5 - POP-UP AFTER PRESSING THE SPEED CONTROL BUTTON ON HELM COMMAND

Once the Speed Control pop-up appears, the operator can perform the following functions:

**Changing the Set Speed** - by either rotating the Helm Command knob either direction or by pressing the plus and minus icons via touchscreen

**Speed Control On/Off**- by pressing down on the Helm Command knob or by pressing the pause icon via touchscreen.



## OVERVIEW

### USING HELM COMMAND - TAB BUTTON

Pressing the Tab button will change the currently viewed page from the current tab to the next tab. Pressing the tab button multiple times will cycle through all of the tabs. The two screenshots below illustrate an example of pressing the Tab button on the Home menu.

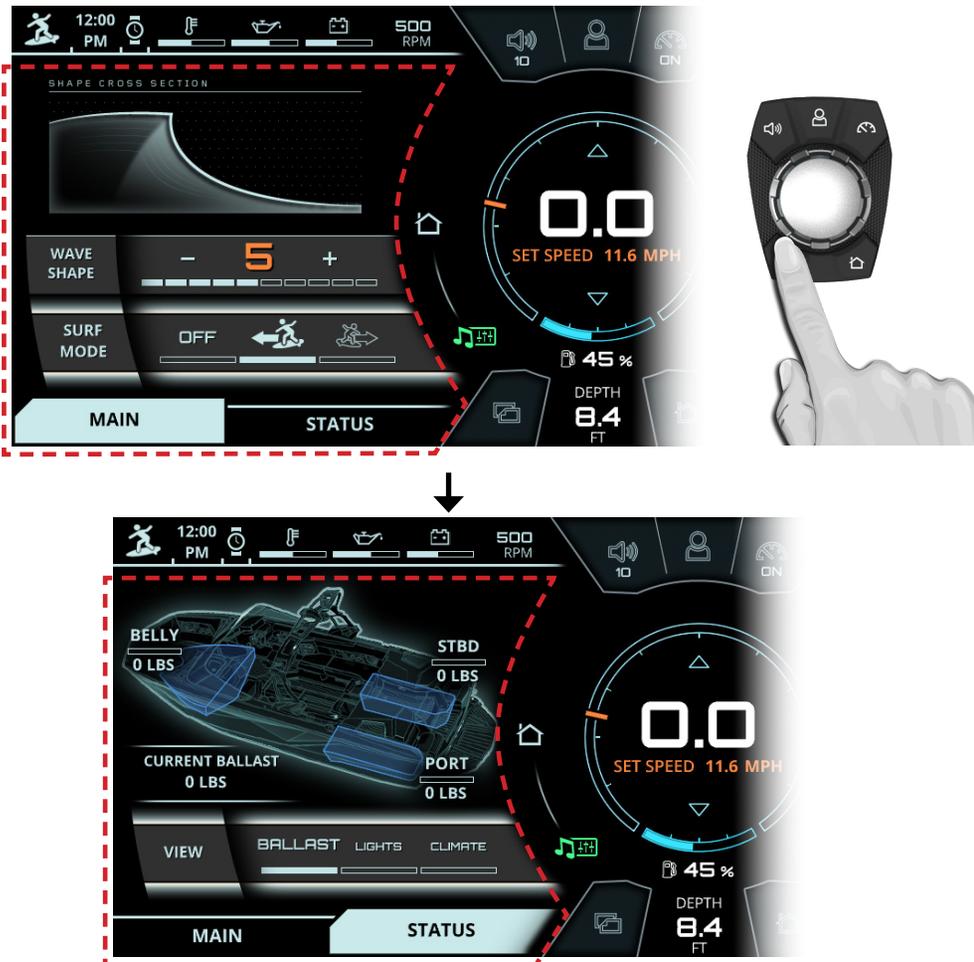


FIG. B6 - PRESSING THE TAB BUTTON ON HELM COMMAND TO CHANGE TO THE "STATUS" TAB



## OVERVIEW

### USING HELM COMMAND - HOME BUTTON

Pressing the Home button will always take the operator back to the Home menu so that he/she can have quick access to vital settings and gauges. The two screenshots below illustrate an example of pressing the Home button to transition from the Ballast menu to the Home menu.

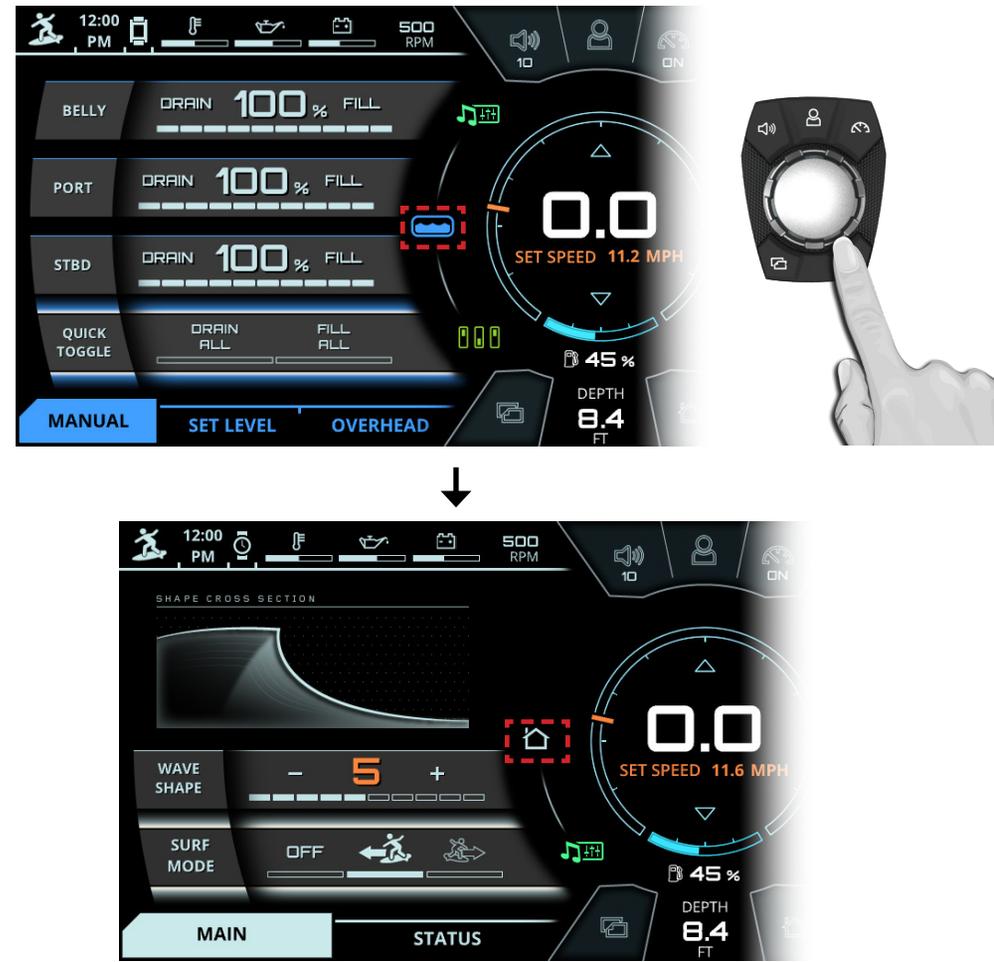


FIG. B7 - PRESSING THE HOME BUTTON TO RETURN TO THE HOME MENU



## HOME MENU



FIG. C1 - MAIN TAB ON THE HOME MENU, AT SURF SPEEDS

The Main Tab on the Home Menu is dedicated to displaying 1) functions that control the wake/wave shape behind the boat and 2) functions that aid the maneuvering of the boat in certain scenarios.

The functions shown will change depending on whether the operator is in a set speed range for surfing (below 13.0 mph) or wakeboarding (13.0 mph or above). It is important to put the set speed in the proper range for the desired towed watersport. Please reference factory-created User profiles for good starting points for settings for each watersport/skill level.

**Surf set speeds (below 13.0 mph)** - the boat will NOT be planing on top of the water and an asymmetrical wave can be formed behind the boat. "Wave Shape" and "Surf Mode" will be the two functions shown.

**Wave Shape** - The larger the number, the steeper the wave. The selected value for this will be illustrated by the "Shape Cross Section" graphic above the setting. There are eleven settings (0-10) available when surfing, with finer lip adjustment with the 6-10 settings. An Orange number means that the boat cannot activate the wake adjustment systems to achieve that setting because the boat has not reached the set speed (11.6 mph in the image).

**Surf Mode** - displays if the surf system is on and if so, which side the surf wave is on. The surfer icon with the arrow pointing to the left indicates the Port side and the surfer icon with the arrow pointing to the right indicates the Starboard side (driver's side). In the screenshot, the surf wave is set on the Port side. To change which side the surf wave is on, press the surf wave icon that is not highlighted. If the operator presses the surfer icon that is not highlighted while driving at set speed, the surf wave will quickly move to that side while the boat is underway. If Surf Mode is OFF, then the wave will stay symmetrical behind the boat and will not be large enough on either side to properly surf behind. (NOTE: Surf Mode is not available when Speed Control is Off)



## HOME MENU



FIG. C2 - MAIN TAB ON THE HOME MENU, AT WAKEBOARD SPEEDS

**Wakeboard set speeds (13.0 mph or above)** - the boat should be, in most circumstances, planing on top of the water and have a symmetrical wake formed behind the boat. "Wake Shape" and "Planing Assist" will be the two functions shown.

**Wake Shape** - The larger the number, the steeper the wake. The selected value for this will be illustrated by the "Shape Cross Section" graphic above the setting. There are six settings (0-5) available when in a wakeboarding set speed range. The 0 setting may be more desirable for waterskiing or tubing.

**Plane Assist** - helps getting the boat on plane quickly and staying on plane in tight turns by moving the actuated Hydro-Plate based on the setting, ballast levels, and other dynamic conditions.

**Off** - the Hydro-Plate will remain at the Wake Shape position

**Low** - the Hydro-Plate will move up or down in smaller increments to help the boat get on plane quickly and stay on plane in tight turns. This setting is recommended for boats that are lightly loaded and have a small number of passengers

**High** - the Hydro-Plate will move up or down in larger increments to help the boat get on plane quickly and stay on plane in tight turns. This setting is recommended for boats that are heavily loaded and have a large number of passengers

Please see the following pages for more details on how Wave/Wake Shape and Planing Assist works in conjunction with the actuated NCRS, NSS, and Hydro-Gate systems located at the rear of the boat.



## HOME MENU

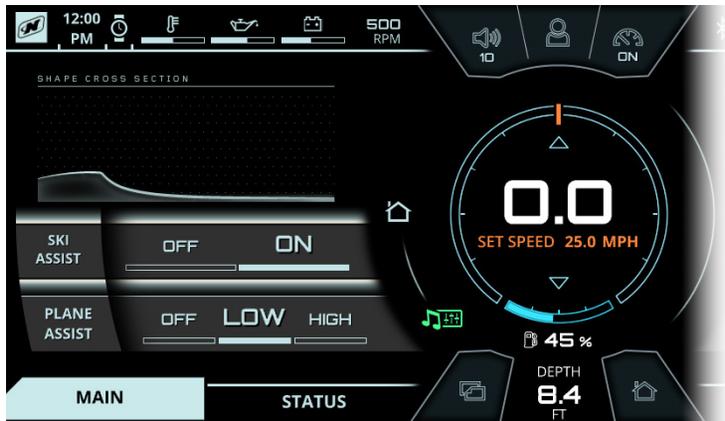


FIG. C3 - MAIN TAB ON THE HOME MENU, AT SKI SPEEDS (GS SERIES ONLY)

The GS Series boats also feature an additional Ski Assist setting for higher set speeds. If Ski Assist is turned “On”, the wake will become flatter.

**Ski set speeds (25.0 mph or above, GS Series only)** - the boat should be, in most circumstances, planing on top of the water and have a symmetrical wake formed behind the boat. “Ski Assist” and “Planing Assist” will be the two functions shown in the 25.0 mph or above set speed range.

**Ski Assist** - When turned on, this setting will move the actuated Hydro-plate to flatten out the wake as much as possible.

**Plane Assist** – helps getting the boat on plane quickly and staying on plane in tight turns by moving the actuated Hydro-Plate based on the setting, ballast levels, and other dynamic conditions.

**Off** - the Hydro-Plate will remain at the Wake Shape position

**Low** - the Hydro-Plate will move up or down in smaller increments to help the boat get on plane quickly and stay on plane in tight turns. This setting is recommended for boats that are lightly loaded and have a small number of passengers

**High** - the Hydro-Plate will move up or down in larger increments to help the boat get on plane quickly and stay on plane in tight turns. This setting is recommended for boats that are heavily loaded and have a large number of passengers

Please see the following pages for more details on how Ski Assist and Planing Assist works in conjunction with the actuated NCRS, NSS and Hydro-Gate systems located at the rear of the boat.



## HOME MENU

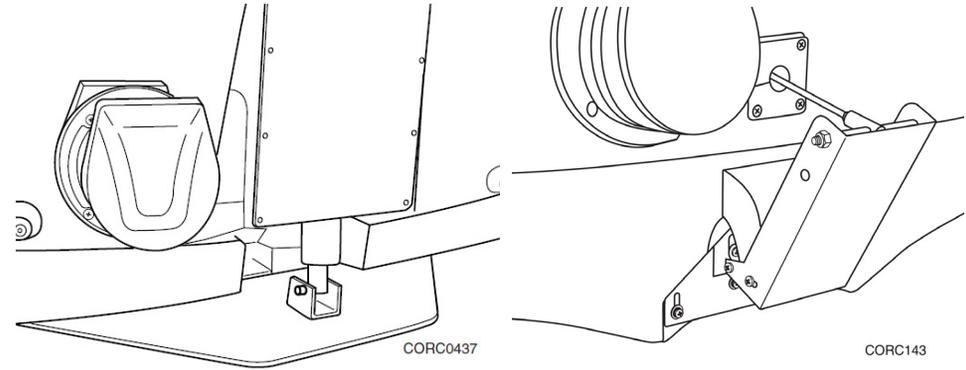


FIG. C4 - NAUTIQUE HYDRO-PLATE, LOCATED AT THE REAR OF THE BOAT (G and GS Series Boats)

FIG. C5 - NAUTIQUE HYDRO-GATE, LOCATED AT THE REAR OF THE BOAT (210 and 230 Boats)

## NCRS, NSS, AND HYDRO-GATE SYSTEMS

The primary way to control the wake/wave behind the boat is through the Wake/Wave Shape function on the Home Menu. This function helps control the automated NCRS and NSS systems and ensures they work in conjunction with one another to produce the desired wake/wave shape.

The NCRS (Nautique Configurable Running Surface) system is an active vessel control system that uses the Nautique Hydro-Plate (illustrated in the figure above) to change the attitude or running angle of the boat based on user setting, ballast levels, and dynamic conditions. By controlling the boat’s attitude, the NCRS system aids in planing, helps keep the boat on plane in tight turns, and reduces bow rise for improved visibility. NCRS also functions as a wave/wake shaping device. By varying the Wake/Wave Shape setting, the user can transform the shape of the wake from a rounded mellow ramp to a pro level lip in seconds.

NSS (Nautique Surf System) is a similar system with actuated plates on either side of the rear of the boat. The Wave Shape setting will inform the NSS system how much to eject the plates out on either side to produce the desired surf wave.

This 210 and 230 boat models feature an actuated Hydro-Gate system (in place of the NCRS system and Hydro-Plate) in order to aid the boat in getting on plane and to shape the wake for skiing, wakeboarding or surfing. When the Shape setting is set to a lower number, the Hydro-Gate is lowered to create maximum lift for a wake with a shallower ramp. When the Shape setting is set to a higher number, the Hydro-Gate is raised to allow the boat to sit deeper in the water, creating the maximum size wake with a steep ramp.



## HOME MENU

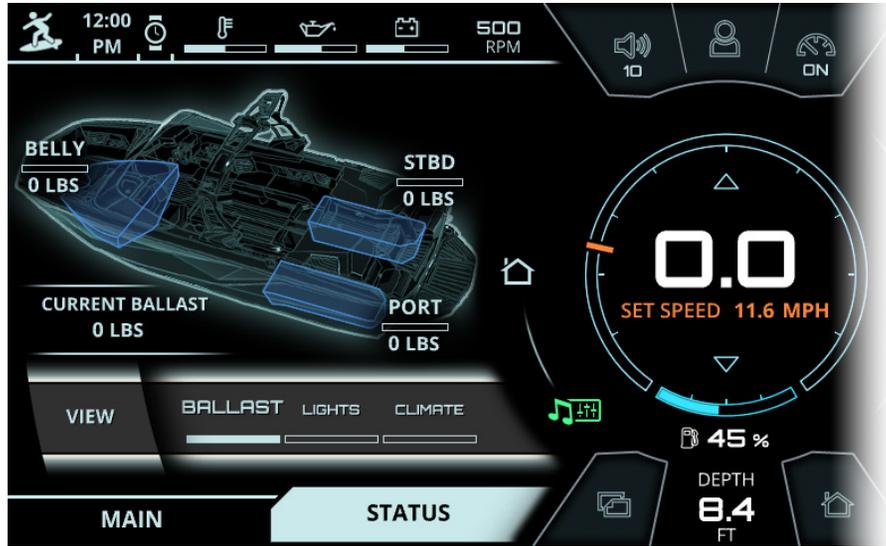


FIG. D1 - STATUS TAB ON THE HOME MENU

### STATUS TAB

This tab displays the current status of boat sub-systems in different 3D views. (The G23 Model is shown in the image above)

- Ballast** - displays current levels/weights for all three ballast tanks
- Lights** - displays which light circuits are currently on in the boat
- Climate** (if equipped) - If seat heaters are equipped, this view will display whether or not the driver and passenger seat heaters are on

The Status tab does not allow the operator to adjust different ballast, light, or climate settings. Please see the Ballast or Switching menus to adjust those settings.



## HOME MENU

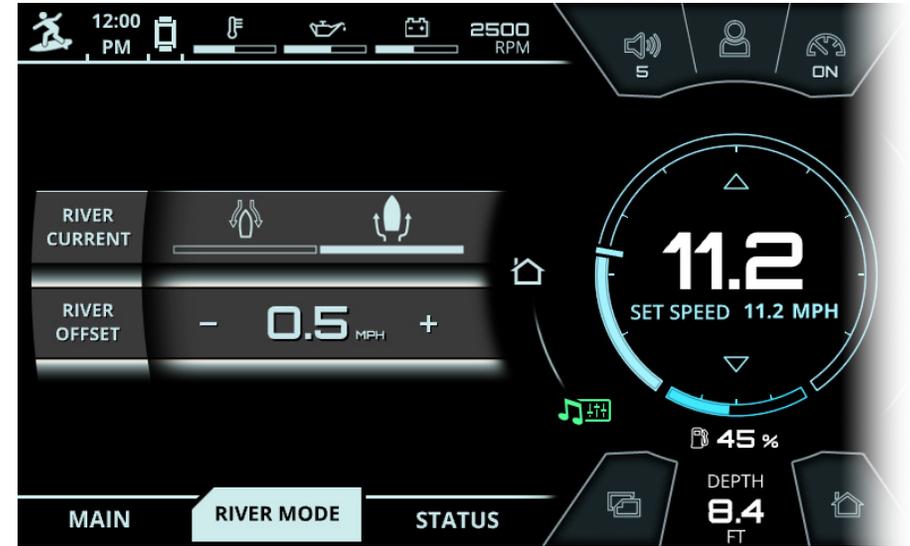


FIG. E1 - RIVER MODE TAB ON THE HOME MENU

### RIVER MODE TAB\*

**\*NOTE:** River Mode is turned on/off from the Preferences Menu, under the Settings tab. River Mode is turned off by default and will **not** be displayed as a tab unless the setting is turned on in the Preferences Menu.

LINC's River Mode is a feature that allows the driver to keep the boat's speed-over-water constant at the push of a button when a current is present. To compensate for the current, the boat's speed-over-ground or "GPS speed" must be adjusted up or down, depending on the direction of the boat relative to the current. River Mode has two key settings:

- River Current** - should be pressed when driver is changing directions from traveling against-the-current to traveling with-the-current, or vice versa.
- River Offset** - should be adjusted up or down to equal the estimated current speed. This offset number will be added to or subtracted from the GPS speed depending on the River Current direction.

In River Mode, the number displayed as the current speed (shown as the big, white 11.2 in Fig. E1) is the speed-over-water. Speed-over-water is the GPS speed (11.7 mph in the above example) plus or minus the River Offset number (-0.5 in Fig. E1, since the boat is traveling with the current flow).



## HOME MENU



FIG. E2 - RIVER MODE FOR BOATS EQUIPPED W/ PADDLE WHEEL

### RIVER MODE TAB\*

**\*NOTE:** River Mode is turned on/off from the Preferences Menu, under the Settings tab. River Mode is turned off by default and will **not** be displayed as a tab unless the setting is turned on in the Preferences Menu.

If your boat is equipped with Paddle Wheel speed control, Then additional functions will appear in the River Mode tab (as shown in Fig. E2).

**Speed Input** - toggles the speed control between “default” (which is a GPS speed control with occasional inputs from the Paddle Wheel) and “Paddle Wheel” (which is speed control derived from the Paddle Wheel device). In general, GPS is more accurate, but does not account for the speed of the river current and thus requires additional user input for the river current speed or “river offset”. Paddle Wheel speed control is not as accurate as GPS, but takes the speed of the river current into account, thus requiring less input from the user. (Fig. E3 on the next page shows what the interface looks like when “Paddle Wheel” is selected).



## HOME MENU



FIG. E3 - RIVER MODE TAB W/ PADDLE WHEEL SPEED INPUT

### RIVER MODE TAB\*

**Paddle Wheel Offset** - lets the operator adjust the offset of the paddle wheel speed input. The Paddle Wheel Offset is calibrated from the factory, so it is recommended that the operator leave this setting alone unless they suspect that the Paddle Wheel needs re-calibrating so that the boat can achieve the proper speed. When in doubt, contact your local dealer if you think the boat is measuring the incorrect speed or think you need to adjust the Paddle Wheel Offset.



## HOME MENU

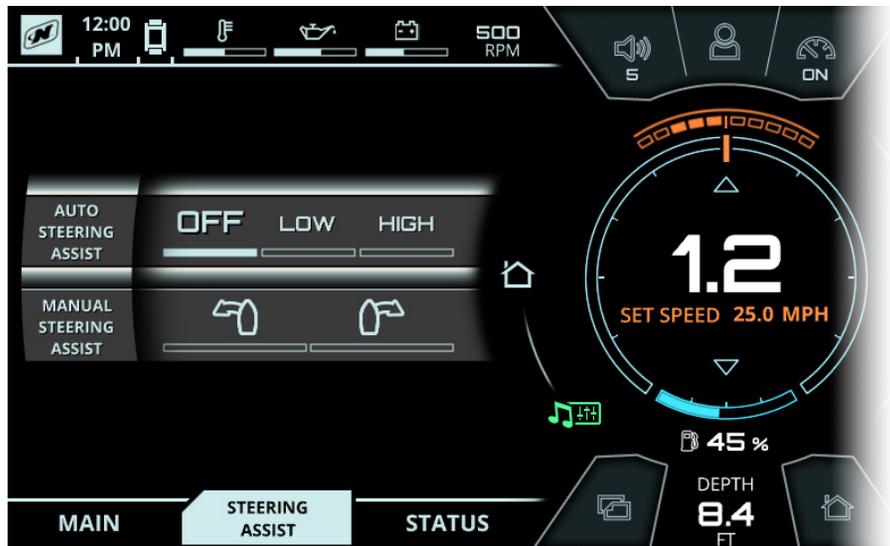


FIG. F1 - STEERING ASSIST TAB\* ON THE HOME MENU

### STEERING ASSIST TAB\*

**\*NOTE** - The above screenshot shows the Steering Assist tab if Nautique Integrated Steering Assist (NISA) is equipped. NISA is an option that is available on Super Air Nautique G21, G23, and G25 boats.

Nautique Integrated Steering Assist utilizes a stern thruster mounted on the rear of the boat to supplement the steering in forward and reverse as well as helping to reposition the boat at rest. Nautique Integrated Steering Assist can only be used when the engine is running AND the boat speed is under 4 mph (6.5 kph).

**WARNING** - Just like a boat propeller, the NISA thruster propeller rotates at a high rate of speed and while it is in use the rotating propeller may cause serious injury or death. You should not approach the ladder or swim platform while it is in operation. Even though the propeller is contained within a tunnel, there is a large volume of water pulled through the tunnel by the propeller when it is in-use, which results in potential for limbs to be pulled towards the blades.

The NISA thruster is designed for low speed use only. To optimize the run time of the thruster it should be used at rest or with the boat in gear at idle. Sudden increases in speed and sharp turns at increased engine speed can produce



## HOME MENU

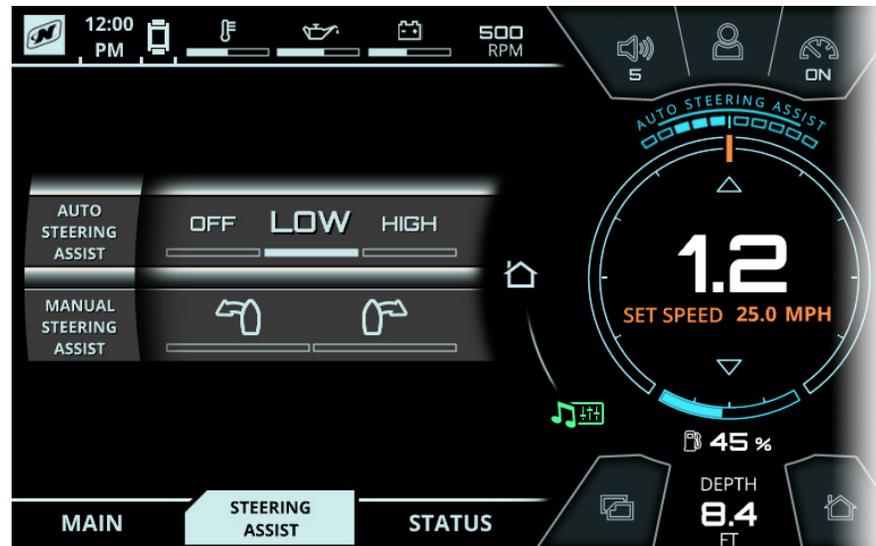


FIG. F2 - AUTO STEERING ASSIST SET TO LOW AND THRUSTER IN USE (BLUE GRAPHICS)

### STEERING ASSIST TAB

turbulence which could result in cavitation of the propeller. In lightly loaded scenarios it is also helpful to have the boat weighted so that it is level port to starboard.

**Auto Steering Assist - Off/Low/High** - this will enable the automatic steering assist feature, which will determine the direction and amount of thrust based off of the steering wheel position and the direction the throttle is put into gear. In forward gear, moving the wheel to starboard will cause the bow to move to starboard. Moving the wheel to port will cause the bow to move towards port. When the boat is in reverse gear, moving the wheel to starboard will cause the transom to move towards starboard. Moving the wheel to port will cause the transom to move towards port (just as a car would steer in reverse backing up).

With the wheel "centered" there will be no output commanded from the Automatic Steering Assist. There is a "dead band" with the wheel centered and just off center to the port and starboard to allow a neutral area/starting point. As the wheel is moved outside the "dead band" the gauge on the display indicates amount of thrust being commanded (this is also an indication of steering wheel/rudder position). Use the minimal amount of thrust required to get the



## HOME MENU

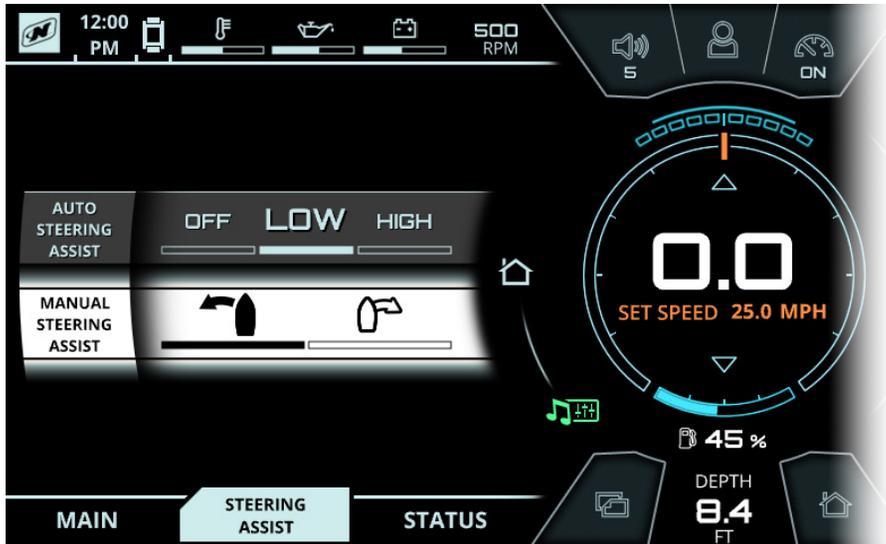


FIG. F3 - MANUAL STEERING, BOW PORT SELECTED. THRUSTER IS IN USE (BLUE GRAPHICS)

## STEERING ASSIST TAB

(Automatic Steering Assist advice continued)

response needed for the maneuver in order to optimize run time of the thruster. This means rotating the wheel slowly from the “dead band” in the direction you desire until the desired amount of movement of the boat is achieved. It is also best practice to keep the thruster on the lowest thrust setting (low or high) required for load or conditions.

**Manual Steering Assist - Bow Port/Bow Starboard** - the Manual Steering Assist feature allows the operator to manually reposition the boat while the boat is at rest without a) input from the steering wheel or b) having to be in gear. The operator may select either of the two Manual Steering Assist options by either touching those icons on the display or by selecting them with the Helm Command rotary knob. To select them with the rotary knob, highlight the Manual Steering Assist graphic and then press the knob down like a button. The graphic will then turn white; while the graphic is white, tilt the knob like a joystick left (port) or right (starboard). Full, 100% thrust will continue to be given for as long as the knob is tilted left/right or for as long as one of the touchpoints icon is pressed.



## HOME MENU



FIG. F4 - ORANGE COLORED GRAPHICS, STERN THRUSTER NOT IN USE



FIG. F5 - BLUE COLORED GRAPHICS, STERN THRUSTER IN USE

## STEERING ASSIST TAB

If your boat is equipped with NISA, then NISA related graphics will be displayed above the speedometer. The color of the NISA graphics will change depending on the condition of the system.

If Auto Steering Assist is set to Low or High, then the text “Auto Steering Assist” will be displayed to inform you that NISA will automatically activate the stern thruster when 1) the boat is below 4 mph 2) the boat is in gear and 3) the steering wheel is turned past the “dead band”.

The curved line below the text indicates the amount of run time that the stern thruster can be used; the smaller the curved line, the smaller amount of run time that remains.

The segmented gauge illustrates the current steering wheel/rudder position. This will correspond to the amount of thrust when Auto Steering Assist is turned to Low or High.

**ORANGE** Colored Graphics (Fig. F4) - the NISA stern thruster is not currently in use.

**BLUE** Colored Graphics (Fig. F5) - the NISA stern thruster is currently in use, either from the Automatic Low/High setting or from one of the Manual port/starboard inputs. If the stern thruster is in-use from the Low/High Automatic settings, the amount of thrust will be determined by the steering wheel position (so 3/5 of available thrust would be given in Fig. F5).



AUDIO MENU

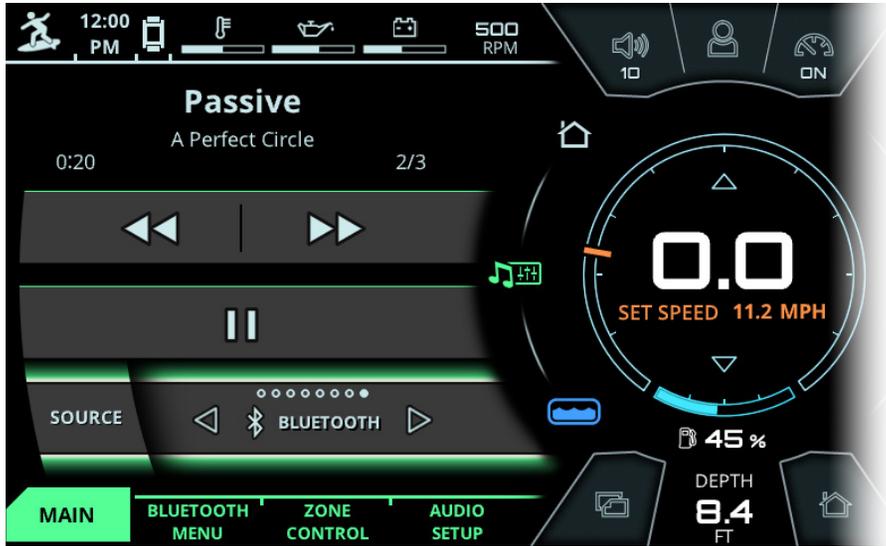


FIG. G1 - MAIN TAB ON THE HOME MENU

MAIN TAB

The Media Menu provides universal control to the audio system, containing all of the same controls and settings as the stereo head unit.

The Main tab contains the following items, in order from top to bottom:

**Currently playing track and artist (or radio station)**

**Previous Track/Next Track (or seek backward/seek forward)** - skips to the previous song or the next song if using Bluetooth or USB inputs (or it will change the frequency/channel if using AM, FM or SiriusXM radio inputs)

**Play/Pause (or Unmute/Mute)** - will toggle Play/Pause if using Bluetooth or USB inputs (or it will toggle Unmute/Mute if using AM, FM, SiriusXM or Auxiliary inputs)

**Source** - displays the currently selected audio source. The operator can change between the AM radio, FM radio, Auxiliary input, SiriusXM satellite radio, USB device, Weather Band, Bluetooth audio and turning the stereo off in this area.



AUDIO MENU

MAIN TAB

If the stereo is turned off, the screenshot depicted below in Fig. G2 will appear.

The operator can turn the stereo on through the Helm Command knob or by tapping the "press to turn stereo on" text via touchscreen.

The stereo can also be turned on and off from the stereo head unit, which is located inside the glove box in passenger's side of the boat, just above the observer's seat.



FIG. G2 - SCREENSHOT OF LINC 3.0 IF STEREO IS TURNED OFF



## AUDIO MENU

### DYNAMIC SOURCE TAB

The Dynamic Source tab is the second tab from the left on the Media menu. The title of this tab changes dynamically according to the currently selected audio source. This tab will display different functions according to the selected source. This tab will be removed when certain sources are selected. The different possible sources are listed below:

**Stereo Off** - stereo is turned off and the dynamic source tab is removed

**AM radio** - stereo plays AM radio frequencies and the dynamic source tab is removed

**FM radio** - stereo plays FM radio frequencies and the dynamic source tab is removed

**Auxiliary input** - stereo plays from the 3.5 mm Auxiliary input and the dynamic source tab is removed

**SiriusXM satellite radio** - stereo plays SiriusXM channels and the dynamic source tab is removed

**USB device** - stereo plays from a device connected to the USB port in the passenger's side glove box. The "USB MENU" tab contains additional functionality to control playlists from USB devices. The Browse Files function will bring up a pop-up menu that will allow the operator to navigate through the folders and files that are on the USB connected device. Please note that it may take a while for the system to load all of the folders/files that are stored on the USB connected device.

**Weather Band** - stereo plays Weather Band frequencies and the dynamic source tab is removed

**Bluetooth Audio** - stereo plays audio from a bluetooth connected phone or device. The "BLUETOOTH MENU" tab contains additional pairing and connecting functionality. "Pair" searches for nearby Bluetooth devices to pair with. Please ensure that the Bluetooth device you are trying to connect with is in "discoverable mode" before pressing pair. The "connect/disconnect" icon and text at the bottom of the page connects or disconnects the currently paired Bluetooth device. Once connected, music from the Bluetooth device can be played through LINC.

Please see the screenshots on the following page for examples of the USB and Bluetooth dynamic source tabs.



## AUDIO MENU

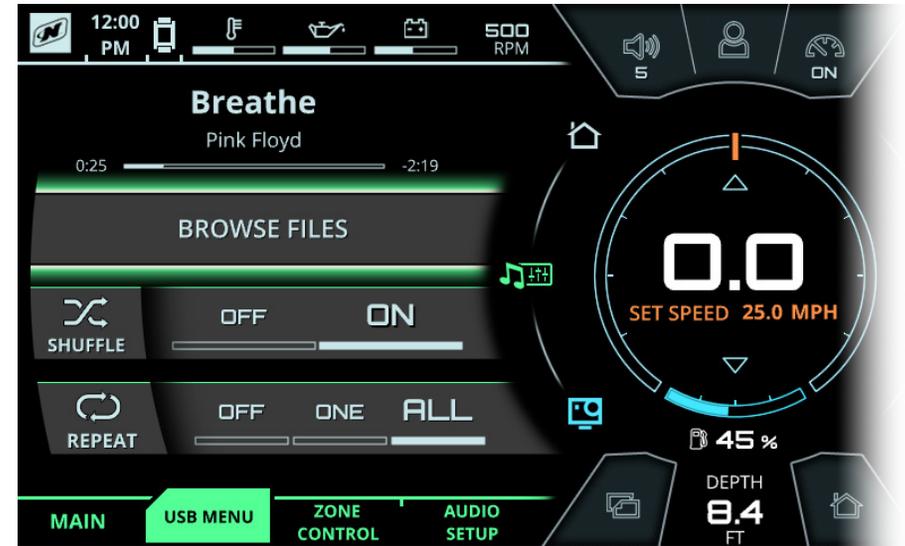


FIG. G3 - USB MENU TAB ON THE MEDIA MENU



FIG. G4 - BLUETOOTH MENU TAB ON THE MEDIA MENU



## AUDIO MENU



FIG. G5 - ZONE CONTROL TAB\* ON THE MEDIA MENU

### ZONE CONTROL TAB\*

**\*NOTE** - The Zone Control tab is only available to boats that are equipped with certain speaker/audio packages.

The Zone Control tab allows the operator to individually adjust the volume level for each of the five zones of the boat listed below:

**Cockpit** - controls the volume level of the speakers in the main cockpit area and the bow (if equipped). Some of these speakers are located in recessed pocket panels.

**Dash (if equipped)** - controls the volume level of the two dash speakers or tweeters, located just behind the windshield and in front of the dash (driver's side) and in front of the glove box (passenger's side)

**Tower (if equipped)** - controls the volume level of the tower speakers

**Sub (If equipped)** - controls the volume level of the subwoofer(s)



## AUDIO MENU



FIG. G6 - AUDIO SETUP TAB ON THE MEDIA MENU

### AUDIO SETUP TAB

The Audio Setup Tab enables operators to fine tune the audio system to their preferences. The operator can adjust the overall bass, mid, treble, and Auto Volume (Auto Vol) settings from this tab.

**Bass** - modifies sounds from the audio system that are low in pitch

**Mid** - modifies sounds from the audio system that are in the frequency range between 250-2000 Hz (available if Zone Control is equipped)

**Treble** - modifies sounds from the audio system that are high in pitch

**Balance** - adjusts the sound port-to-starboard (left-to-right). Increasing the fade will increase the volume on the port side of the boat and decrease the volume on the starboard side of the boat and vice versa (not available if Zone Control is equipped)

(Auto Volume explained on following page)



## AUDIO MENU

### AUDIO SETUP TAB

**Auto Vol-** a feature that gradually increases the overall volume of the audio system as the operator increases the speed of the boat and it also gradually decreases the overall volume of the audio system as the operator decreases the speed of the boat.

These Auto Volume Minimum/Maximum values will automatically adapt to volume changes that the operator makes while driving. For example, if the operator is at 2 mph and he/she lowers the volume to "5", then the volume will lower to "5" whenever the operator is below 5 mph again. If the operator is driving at the set speed (25.0 mph in Fig. G6) and he/she increases the volume to "31", the volume will then become "31" whenever he/she reaches set speed again. The Minimum and Maximum values will not change until the operator changes the volume again below 5 mph (thus changing the Minimum) or changes the volume at set speed (thus changing the Maximum).



## GOPRO MENU



FIG. H1 - CONTROL TAB ON THE GOPRO® MENU

### CONTROL TAB

The GoPro® Menu allows the operator to control a GoPro® camera through a WiFi connection with the LINC screen. In order to connect to the LINC screen, you must use a GoPro® camera with built in WiFi functionality (HERO4 or newer).

The Control tab contains the following information/functions, in order from top to bottom:

**Camera Info/Preview** - If a GoPro® camera is connected, this area will contain the resolution/frames per second, current battery level, and recording time remaining (or number of images remaining). This area also contains a preview window that can display a live video feed from the connected camera. Please note that this preview feature will be unavailable while the camera is recording/in-use.

**GoPro® Record/Capture/Timelapse** - If in video mode, this will start or stop video recording. If in single photo mode, this will take one picture. If in burst photo mode, this will take multiple pictures. If in Timelapse photo mode, it will start or stop the timelapse recording.

**GoPro® Mode** - selects the mode of the connected GoPro® camera. The four modes are 1) Video 2) Single Photo 3) Burst Photo and 4) Timelapse Photo.



## GOPRO MENU



FIG. H2 - SETTINGS TAB ON THE GOPRO® MENU

### SETTINGS TAB

The Settings tab contains the following information/functions, in order from top to bottom:

**Camera Name** - The upper area will contain the name of the currently connected GoPro® camera and the current battery status. If a camera is not connected through WiFi, then this area will display a "not connected" message.

**New GoPro® Camera** - Will bring up a pop-up menu so that the operator can connect a new GoPro® camera through WiFi. (Please see the following pages for further instructions of the connecting process)

**Saved GoPro® Cameras** - Will bring up a pop-up menu of the previously used GoPro® cameras. The operator may then choose to connect or delete any previously used cameras.

**GoPro® Auto Record** - If video or photo timelapse mode are selected, Auto Record will automatically start recording once the boat's speed is greater than 8 mph and will automatically stop recording once the boat's speed is less than 7 mph.



GOPRO MENU

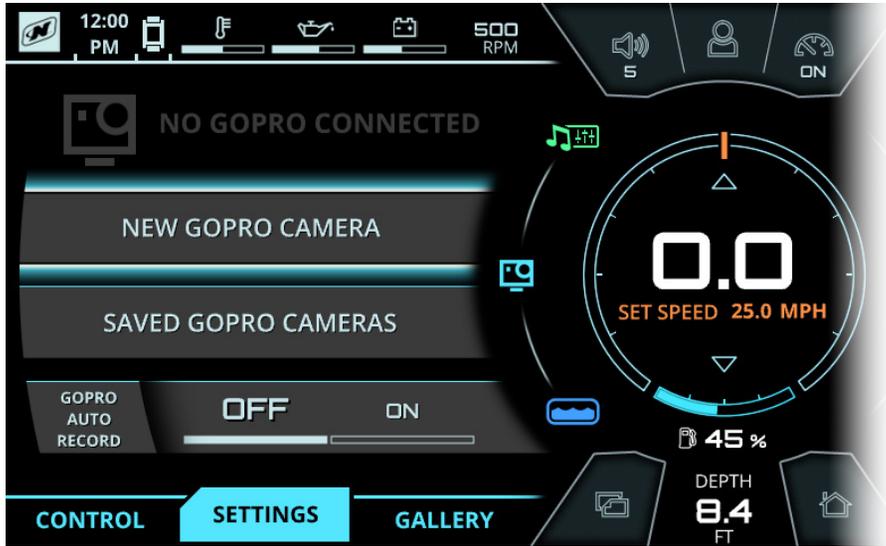


FIG. H3 - CONNECTING TO A NEW GOPRO® CAMERA\*

SETTINGS TAB - CONNECTING A NEW GOPRO® CAMERA

**\*NOTE** - Before initiating the connecting process through LINC, make sure that your wireless network is turned on from your GoPro® camera.

To add a new camera, select “New GoPro Camera” and a pop-up menu will appear.

From the pop-up menu, select “Scan for GoPro Cameras” so that LINC can search for nearby wireless networks. When the scanning process is complete, a list of available wireless networks will appear with the signal strength indicated to the left of the network name.

Scroll down to select the desired camera. From there, a keyboard will pop up for you to enter the password for the GoPro WiFi (the password may be displayed on your camera’s screen).

After entering the password, the pop-up menu will disappear, the system will finish the connecting process with the camera, and then the name of the camera will appear with a battery status icon and the “Connected” text. At this stage, you may now remotely control your GoPro® camera through the “Control” tab or you may view the saved files on your GoPro® camera through the “Gallery” tab.



GOPRO MENU



FIG. H4 - POP-UP MENU FOR CONNECTING A NEW GOPRO® CAMERA

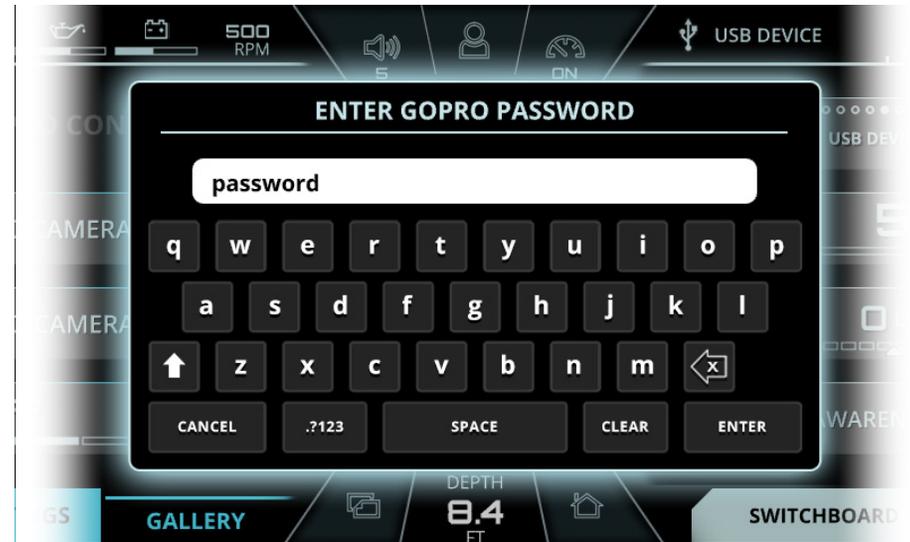


FIG. H5 - POP-UP MENU FOR ENTERING WIFI PASSWORD FOR A GOPRO® CAMERA



## GOPRO MENU

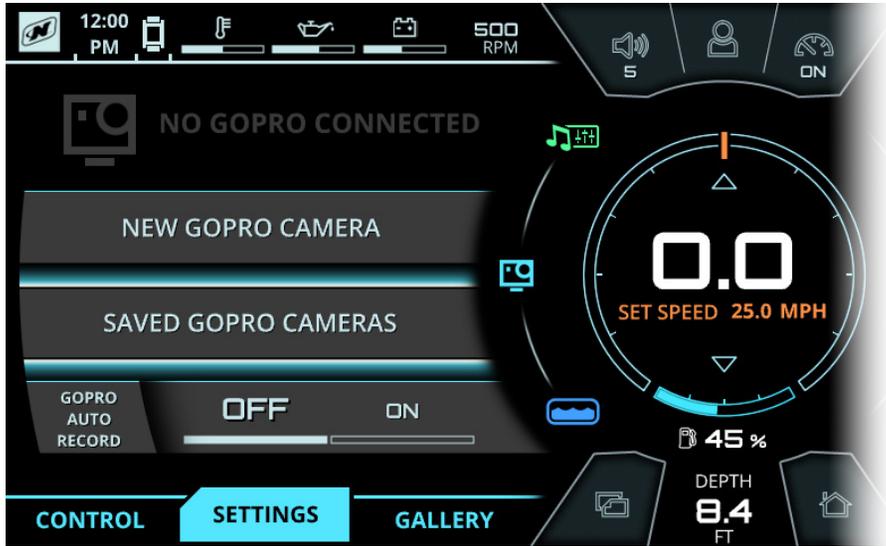


FIG. H6 - CONNECTING TO A SAVED GOPRO® CAMERA\*

## SETTINGS TAB - SAVED GOPRO® CAMERAS

**\*NOTE** - Before initiating the connecting process through LINC, make sure that your wireless network is turned on from your GoPro® camera.

To re-connect to a previously connected GoPro camera, select “Saved GoPro Cameras” and a pop-up menu will appear (see Fig. H7).

Scroll through the list of previously connected GoPro cameras and select the desired camera.

The pop-up menu will then disappear and the name of the camera will appear with a battery status icon and the “Connected” text. At this stage, you may now remotely control your GoPro® camera through the “Control” tab or you may view the saved files on your GoPro® camera through the “Gallery” tab.



## GOPRO MENU



FIG. H7 - POP-UP MENU FOR CONNECTING A NEW GOPRO® CAMERA



## GOPRO MENU

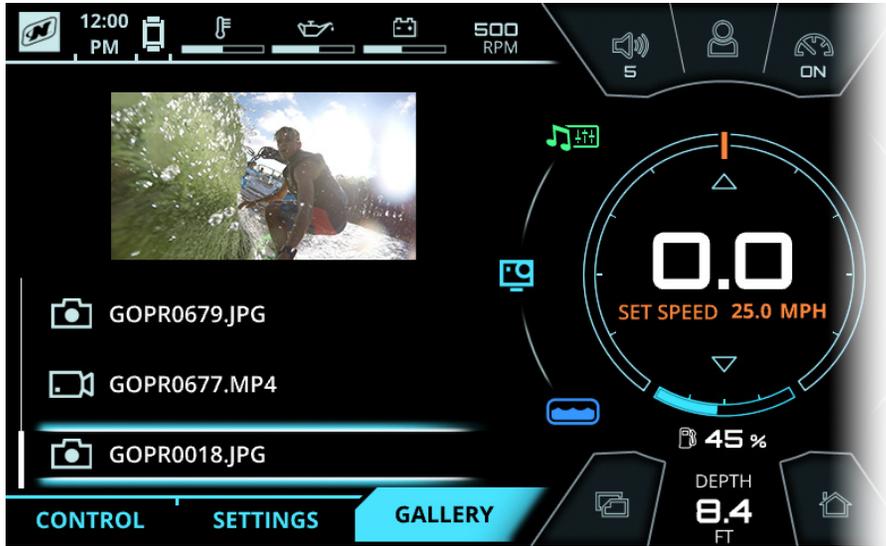


FIG. H8 - GALLERY TAB ON THE GOPRO® MENU

## GOPRO MENU

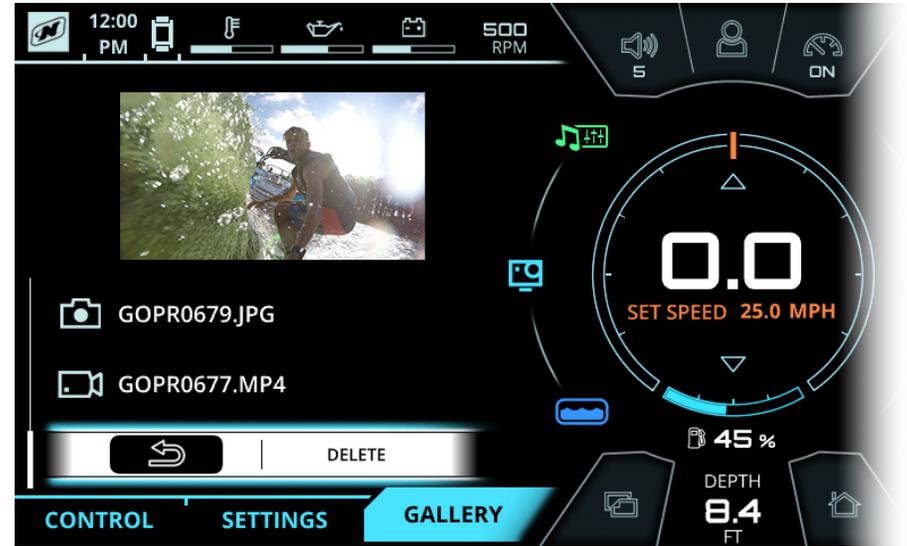


FIG. H9 - SELECTING A FILE ON THE GALLERY TAB

## GALLERY TAB

The Gallery allows the operator to preview files on a connected GoPro® camera through the LINC screen. The main purpose of the Gallery tab is to allow the operator to quickly sort through files and see which ones should be kept and which ones should be deleted.

The file menu below the viewing area will allow the operator to scroll through all files that are stored on the connected GoPro® camera. As the operator highlights a file, an image preview will appear in the viewing area. Please note that when a video is highlighted, only a still image will appear in the viewing area.

When the file is selected, the operator can choose to go back to the file menu or can choose to delete that file.

If there is no GoPro® camera connected, then a message will appear saying "GoPro Gallery is Currently Unavailable".

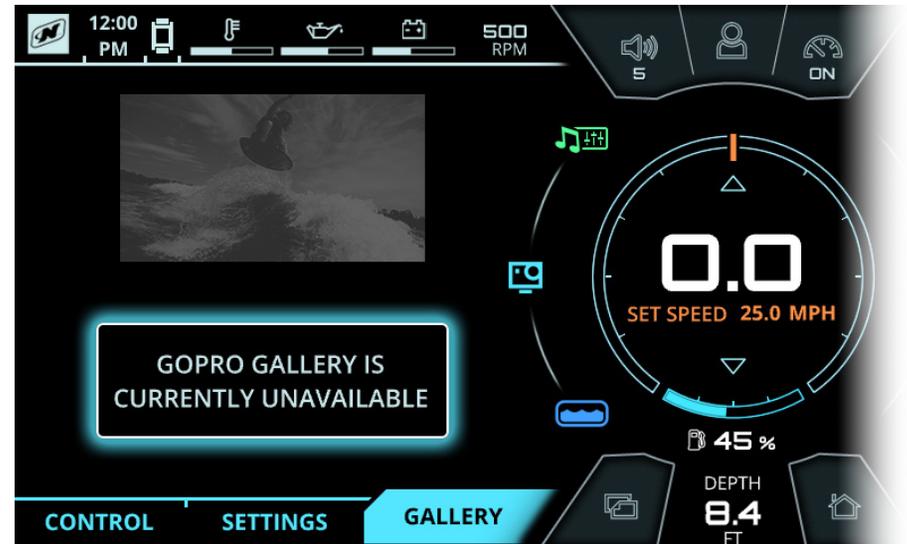


FIG. H10 - APPEARANCE OF GALLERY TAB IF NO GOPRO CAMERA IS CONNECTED



## BALLAST MENU

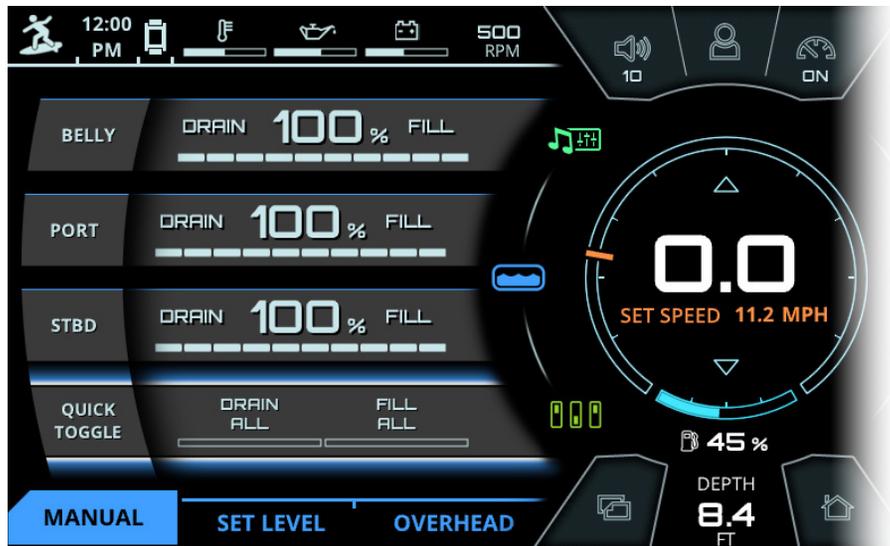


FIG. J1 - MANUAL TAB ON THE BALLAST MENU

### MANUAL TAB

The Super Air Nautique boats contain integrated ballast tanks that use pumps to fill or drain the tanks with water for the purposes of enhancing the wake size/shape for wakeboarding. The Ballast Menu allows the operator to adjust how those ballast tanks are filled or drained.

The Manual tab will allow the operator to manually turn the ballast pumps on/off to fill or drain the ballast tanks.

If an operator presses “Fill” on a particular tank, the pump will stay on and continue to fill that tank until it is 100% full. The operator may, at any time, press “stop pump(s)” to turn the pump(s) off.

If an operator presses “Drain” on a particular tank, the pump will stay on and continue to drain that tank until it is completely empty, at 0%. Once again, the operator may, at any time, press “stop pump(s)” to turn the pump(s) off.

The “Quick Toggle” feature allows the operator the fill or drain all ballast tanks simultaneously.



## BALLAST MENU

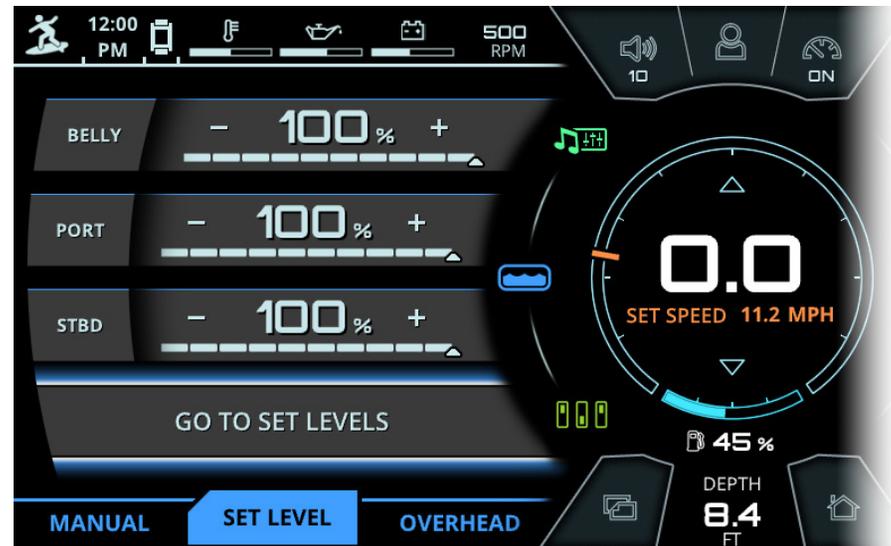


FIG. J2 - SET LEVEL TAB ON THE BALLAST MENU

### SET LEVEL TAB

The Set Level tab enables the operator to set desired ballast tank levels in 10% increments.

To set a ballast tank level, select a ballast tank and increase or decrease the level as desired. The set level is indicated by a triangle icon; this triangle icon will move along the tank’s segmented bar gauge graphic.

When all tank levels are properly set, press “Go to Set Levels” and the pumps will automatically fill or drain each tank to their set levels.

Once again, the operator may, at any time, press “stop pump(s)” to turn the pump(s) off.

Please note that each of the default, factory user profiles come with pre-determined ballast tank set levels.



**BALLAST MENU**



FIG. J3 - OVERHEAD TAB ON THE BALLAST MENU

**OVERHEAD TAB (WITH BALLAST SHIFT)**

The Overhead tab on the Ballast Menu gives a 3D view of the boat which shows tank levels in weight (lb or kg) and visually illustrates which tanks are currently filling or draining with an animated arrow graphic (no tanks are filling or draining in the above screenshot)

The Overhead tab also features a “Ballast Shift” function. “Ballast Shift” allows the operator to shift weight Port-to-Starboard, or vice versa, in 50 lb (23 kg) increments. This is useful when the boat is slightly unbalanced and needs to have weight adjusted in small increments.

To use “Ballast Shift”, just select “Ballast Shift” and set the amount of weight to be shifted to the Port or Starboard sides. After a short verification period, the boat will then turn on the ballast pumps to fill /drain the proper pumps to shift the selected amount of weight over.



## SWITCHING MENU



FIG. K1 - LIGHTS TAB\* ON THE SWITCHING MENU

### LIGHTS TAB\*

**\*NOTE** - some of the lights shown in above screenshot are optional and are not equipped on every boat.

The Switching Menu displays digital switches for lights, the heater fan and the seat heater pads in the driver's seat.

The Lights tab shows on/off switches for some of the boat's lighting. Please note that the Nav/Anchor light switch is located on the keypad below the LINC display.



## SWITCHING MENU

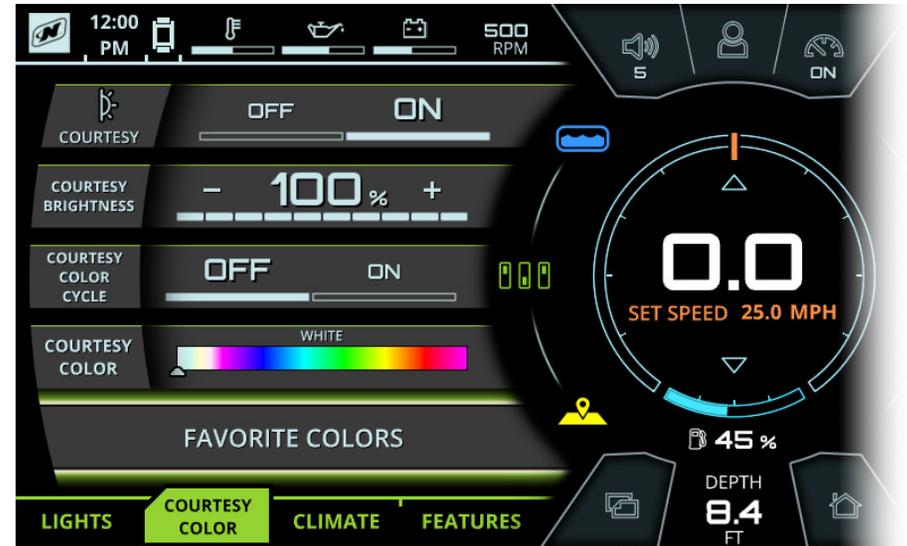


FIG. K4 - COURTESY COLOR\* TAB ON THE SWITCHING MENU

### COURTESY COLOR\*

**\*NOTE** - The Courtesy Color tab is only available to boats that are equipped with the Enhanced Courtesy Lighting Package option (available on G and GS boats).

The Courtesy Color tab enables the operator to customize the color and brightness of the courtesy lights in the boat, which includes the small circular courtesy lights, lighted cup holders, and the lighted Nautique badges.

**Courtesy Lights** - turns all of the courtesy lights on or off

**Courtesy Brightness** - adjusts the brightness of the courtesy lights in increments of 10%

**Courtesy Color Cycle** - will constantly cycle through multiple colors if turned on. The courtesy lights will slowly fade from one color to another.

**Courtesy Color** - will select one color for all courtesy lights (unless Courtesy Color Cycle is turned on). White will be selected by default. Users can scroll through the spectrum bar either by touchpoint or by using the Helm Command rotary knob

(Favorite Colors explained on next two pages)



## SWITCHING MENU



FIG. K5 - FAVORITE COLORS POP-UP FOR THE COURTESY COLOR TAB ON THE SWITCHING MENU

### COURTESY COLOR\* - FAVORITE COLORS

**Favorite Colors** - brings up a pop-up menu that allows the operator to choose a factory pre-set /saved color for the courtesy lights (See Fig. K5). There are 12 colors that are factory pre-set; most of these colors are matched specifically to Nautique's vinyl colors. In addition to these 12 colors, there is room for 4 more additional, operator-selected colors. Please note that the 12 factory pre-set colors and the 4 other user-selected colors can be deleted or overwritten. A factory rest of the LINC system will default the system back to the 12 factory pre-set colors and the 4 empty slots.

When a color slot is selected in the Favorite Colors pop-up, several options appear (see Fig. K6):

**Back Arrow Icon** - Will take the operator back to the list of favorite colors

**Select** - Will immediately change all courtesy lights to that specific color

**Overwrite** - Will overwrite that slot with the current color of the courtesy lights. An additional Keyboard pop-up will appear to allow the user to rename that color slot.



## SWITCHING MENU

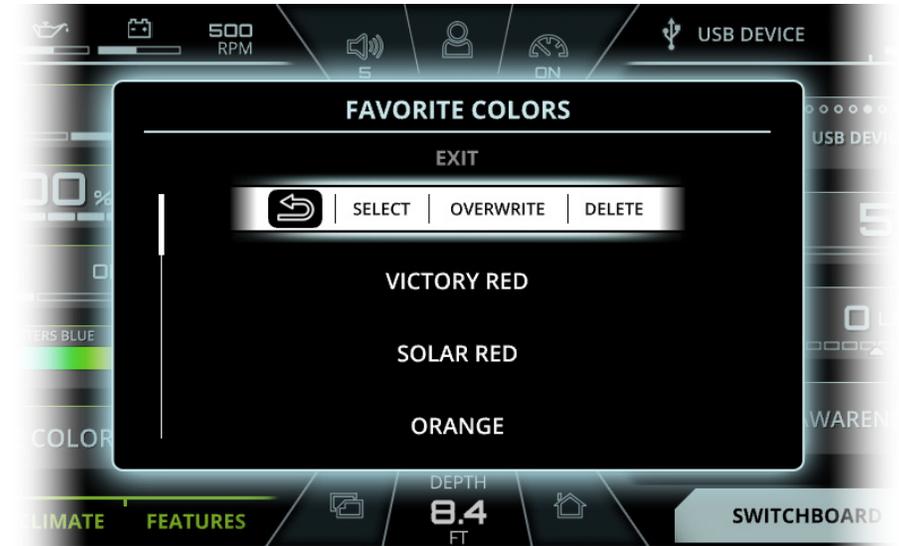


FIG. K6 - FAVORITE COLORS POP-UP, OPTIONS FOR EACH COLOR

### COURTESY COLOR\* - FAVORITE COLORS

**Delete** - will delete the color name and information from that particular slot. Once deleted, the slot will then say <EMPTY>.



## SWITCHING MENU



FIG. K2 - CLIMATE TAB\* ON THE SWITCHING MENU

### CLIMATE TAB\*

**\*NOTE** - the heater switches shown in the above example are optional and are not equipped on every boat. This tab only exists if those heater switch options are equipped.

From the Climate tab, the operator may turn on/off the heater fan and driver seat heater.

The current on/off state of the passenger seat heater is shown here, but it cannot be controlled by LINC; that switch is located on top of the deck just aft of the passenger's seat (aka observer's seat, love seat).

The Climate tab also displays the current air and water temperatures in the top portion of the page.



## SWITCHING MENU



FIG. K3 - FEATURES TAB ON THE SWITCHING MENU

### FEATURES TAB

The Features tab displays the locations of key features of the boat on a 3D model. This includes the following features:

- 12 Volt Outlets
- USB Inputs
- 3.5 mm Auxiliary Input
- T-Handle drain
- Batteries
- Bilge Pump

The operator cannot control any of the above features through LINC, this tab is meant to just simply display the location of those features for reference.



## MAP MENU



FIG. M1 - MINI MAP ON THE MAP MENU

### MINI MAP TAB

The Map Menu displays an overhead map of the boat, represented by a green boat icon, and shows surrounding bodies of water. Latitude and Longitude coordinates are displayed at the bottom of the pages in the gray transparent box. Also, a scale bar is shown in the lower left corner of the page to reference scale of land masses and bodies of water.

The Mini Map tab contains four mapping functions:

**Enable Joystick** - if selected, enables the operator to move around the map by moving the Helm Command knob like a joystick. The operator can joystick in four directions: up, down, left, and right

**Course Up/North Up** - toggles orientation of the map. Course Up will rotate the map according to where the front of the boat is pointed to. North Up will always orient the map to where North is at the top of the screen.

**Zoom In (plus sign)** - Zooms in on the map

**Zoom Out (minus sign)** - Zooms out on the map



## MAP MENU

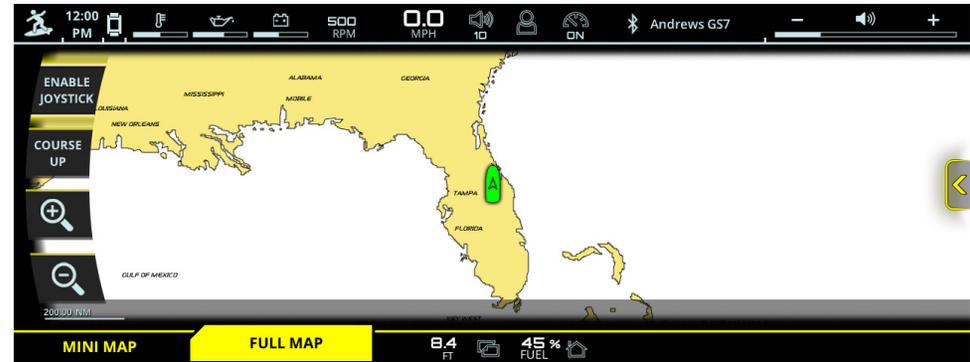


FIG. M2 - FULL MAP ON THE MAP MENU

### FULL MAP TAB

The Full Map tab shows a larger, fullscreen view of the map.

The Full Map tab includes the same four functions as the Mini Map tab, but also features a **slideout window** for waypoints and tracks. To view the slideout window, either press the yellow arrow icon on the screen (to the right side of Fig. M2) or joystick over to the right with the Helm Command knob

Waypoints allow the operator to mark certain areas of interest with one of the four map waypoint icons (fish, anchor, gas pump, or flag).

Tracks allow the operator to save the track, or path, of the boat.

Please see the new couple of pages to learn about the operation of the slideout menu, waypoints, and tracks on the full map tab.



## MAP MENU



FIG. M3 - FULL MAP WITH SLIDEOUT WINDOW FOR WAYPOINTS AND TRACKS

### FULL MAP TAB - WAYPOINTS AND TRACKS

When the Slideout window is open, the map size will decrease in width to a Mini Map size. To hide the Slideout window, just press on the yellow arrow on the screen or joystick over to the left with the Helm Command knob.

The slideout window contains five functions:

**Waypoint Manager** - takes the Operator to the waypoint manager, where saved waypoints can be edited and deleted

**Save Waypoint** - saves a new waypoint where the cursor is currently located

**Track Manager** - takes the Operator to the track manager, where saved waypoints can be edited and deleted

**Save Track** - saves the current track

**Clear Track** - clears the current track



## MAP MENU

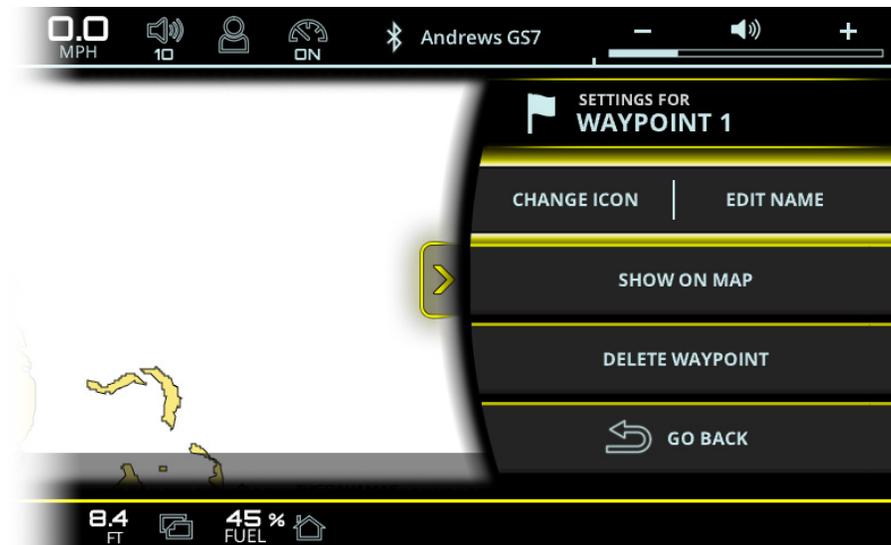


FIG. M4 - FULL MAP WITH WAYPOINT MANAGER

### FULL MAP TAB - WAYPOINTS AND TRACKS

Once a waypoint is selected from the list of saved waypoints the operator may do the following from the Waypoint Manager:

**Change Icon/ Edit Name** - changes the icon or edits the name of the waypoint

**Show On Map** - moves the map to the saved waypoint

**Delete Waypoint** - deletes the waypoint

**Go Back** - goes back to the list of waypoints

The Track Manager is very similar and contains the following functions:

**Edit Name** - allows operator to edit the name of the track

**Show/Hide** - toggles whether the track is shown or hidden

**Delete Track** - deletes the track

**Go Back** - goes back to the list of tracks



## PREFERENCES MENU



FIG. N1 - SETTINGS TAB ON PREFERENCES MENU

### SETTINGS TAB

The Preferences menu contains the interface/interaction settings of the LINC 3.0 unit.

The Settings tab contains the following settings:

**River Mode** - allows the driver to keep the boat's speed-over-water constant at the push of a button when a current is present.

**Auto Volume** - automatically increases/decreases the volume as speed increases/decreases

**Speed Buzzer** - the LINC unit audibly buzzes when the set speed is achieved

**Depth Buzzer** - the LINC unit audibly buzzes when the boat is in shallow waters, and buzzes when the minimum depth is reached

**Minimum Depth**- sets when the Depth Buzzer goes off



## PREFERENCES MENU



FIG. N2 - DISPLAY TAB ON PREFERENCES MENU

### DISPLAY TAB

The Display tab contains the following settings:

**Display Brightness** - adjusts the brightness of the LINC display

**Units** - toggles the units displayed on LINC between English and Metric

**Time Zone** - sets the time zone according to GMT offset standards

**Daylight Savings Time** - toggles daylight savings time on/off

**Clock Mode** - toggles the clock between 12 hour and 24 hour mode



## PREFERENCES MENU



FIG. N3 - SYSTEM TAB ON PREFERENCES MENU

### SYSTEM TAB

The System tab contains the following:

**Power Diagnostics** - displays a list of circuit fault codes and descriptions; the operator can reset faults here (See page ??).

**Engine Diagnostics** - displays a list of engine fault codes and descriptions; on some engines, corrective action will be shown (See page ??).

**GPS Utilities** - contains options to set up track and position, chart and time, and waypoint manager. Also displays satellite status.

**System Info** - identifies the LINC display and the current software installed on the display (See page ??).

**Dealer Settings** - displays a menu that give dealers/technicians access to change critical settings/options for the boat. This menu is password protected to prevent the customer from adjusting critical boat settings that may significantly affect the operation of the boat.

**Surf Select** - if turned on, it allows certain settings to be changed by someone who is riding/surfing behind the boat with the Surf Select Remote or Surf Select App on a Pebble Watch.

**Pair Remote (for Surf Select)** - allows a surfer to switch surf sides behind the boat with the Surf Select Remote

**Pair Pebble (for Surf Select)**- allows a surfer/rider to switch surf sides, change set speed, change NSS setting, change NCRS setting, and to adjust the volume through a Pebble watch with the Surf Select App.



## PREFERENCES MENU

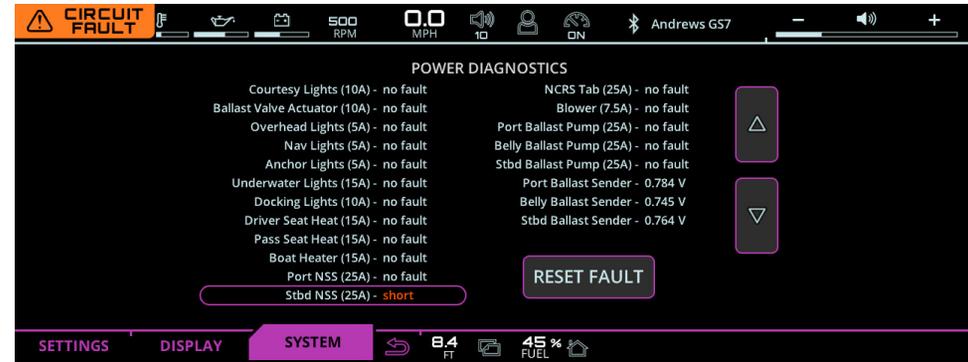


FIG. N4 - POWER DIAGNOSTICS ON PREFERENCES MENU

### SYSTEM TAB - POWER DIAGNOSTICS PAGE

Power Diagnostics shows all of the electrical circuits and shows which circuits have a fault. This page also shows voltage from the Ballast senders.

**NOTE: It is strongly advised that you contact your Nautique dealer immediately if a circuit fault appears.**

If an electrical problem has been fixed by a technician, the technician can then navigate to the circuit that had a problem and then hit "Reset Fault" to then reset the status of that particular circuit.



## PREFERENCES MENU



FIG. N5 - ENGINE DIAGNOSTICS ON PREFERENCES MENU

### SYSTEM TAB - ENGINE DIAGNOSTICS PAGE

Engine Diagnostics displays a list of engine fault codes and descriptions; on some engines, corrective action will be shown. This screen shows the current engine hours.

There is also a vertical "Fault Log" tab that will show prior stored faults.



## PREFERENCES MENU



FIG. N6 - SYSTEM INFO ON PREFERENCES MENU

### SYSTEM TAB - SYSTEM INFO

System Info identifies the LINC display and the current software installed on the display.

When pressed, the "Factory Rest Settings" button will reset everything in LINC back to the factory default settings.

**NOTE: The "Reboot to Bootloader" button is intended for Nautique or Dealer technicians only. This button allows technicians to load LINC software files (via the LINC USB port) to the display screen.**



## RIGHT SECTION

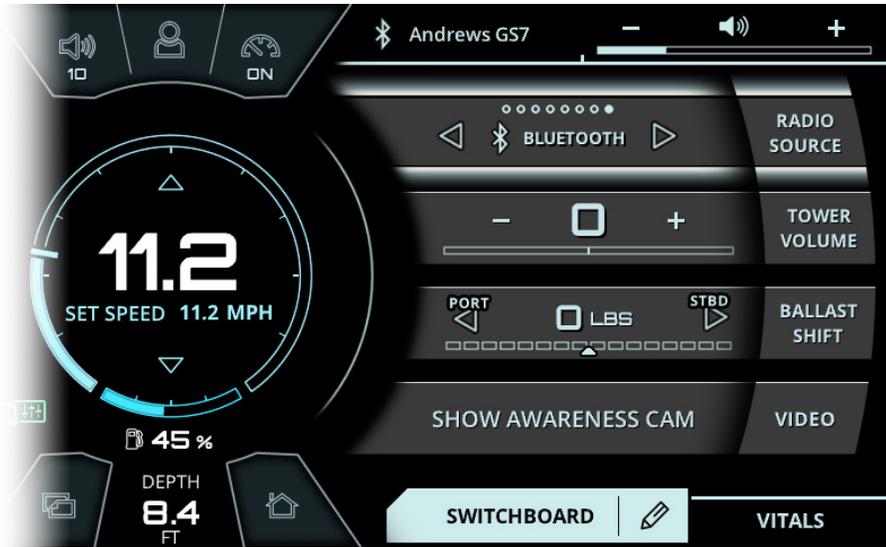


FIG. P1 - SWITCHBOARD TAB ON THE RIGHT SECTION OF THE SCREEN

## SWITCHBOARD TAB

The right section of the screen does not contain any menus, but contains two permanent tabs: The Switchboard tab and the Vitals tab.

The switchboard tab allows the operator to select his/her four favorite functions so that they can be quickly adjusted (or turned on/off) from the right side of the screen without having to navigate to any left side menus. The operator can freely mix and match functions from various menus on the switchboard tab; these functions will operate exactly as they do from their native menus.



## RIGHT SECTION

### SWITCHBOARD TAB - EDITING THE FUNCTIONS

There are two ways to select or edit which functions are displayed in the switchboard tab:

1. Pressing the pencil icon touch-point (next to the "SWITCHBOARD" name) when viewing the switchboard tab, like the example below.



OR

2. Press-and-Hold on the tab button on the Helm Command keypad when the operator has a function highlighted in the Switchboard tab (Radio Source is highlighted in the example below).



**PRESS & HOLD**

(see following pages for further instructions)



## RIGHT SECTION

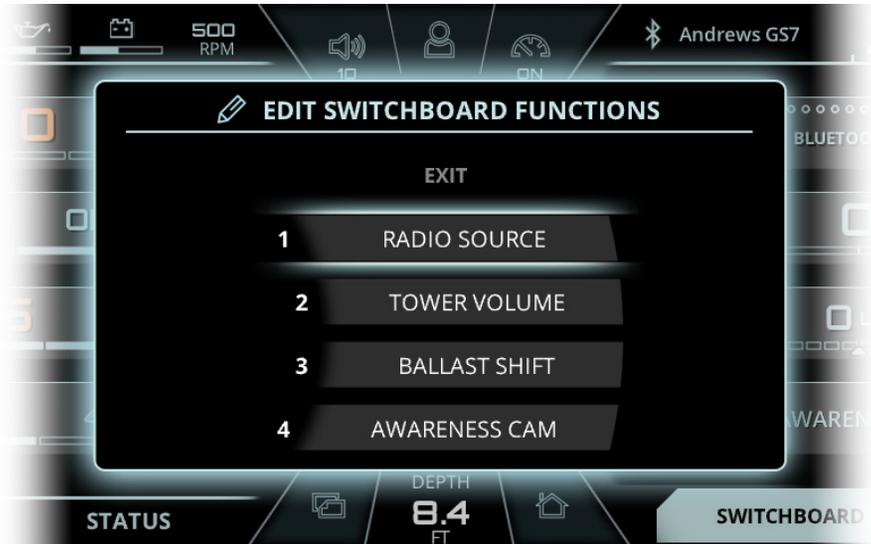


FIG. P2- SWITCHBOARD TAB ON THE RIGHT SECTION OF THE DISPLAY

### SWITCHBOARD TAB - EDITING THE FUNCTIONS

After touching the pencil icon or performing a press-and-hold on the tab button on the Helm Command, the operator will then see a pop-up message prompting him/her to “Edit Switchboard Functions”.

The first step is to select which current function (Lines 1, 2, 3 or 4) you would like to replace (see Fig P2 for reference). You can either make your selection via touchscreen or through Helm Command by rotating the knob and pressing down.

The second step is to then select which new function you would like for that particular line via touchscreen or Helm Command (see Fig. P3 on the next page).

Please note that all of the different possible switchboard functions are organized into tabs at the bottom of the screen. You may change which tab is visible through the touchscreen or through the tab button on the Helm Command keypad.



## RIGHT SECTION



FIG. P3- SWITCHBOARD TAB ON THE RIGHT SECTION OF THE DISPLAY

### SWITCHBOARD TAB - EDITING THE FUNCTIONS

Also note that there may be a scroll bar on the left side of the screen, indicating that you may need to scroll down to see additional functions. Some switchboard functions are dependent upon certain optionally equipped items (e.g., certain audio functions for the Zone Control option) and those functions will not be displayed if certain options are not equipped.

After selecting your desired function, the Edit Switchboard dialog box will close and will display the new function in its proper location on the right side of the screen under the switchboard tab.



## RIGHT SECTION

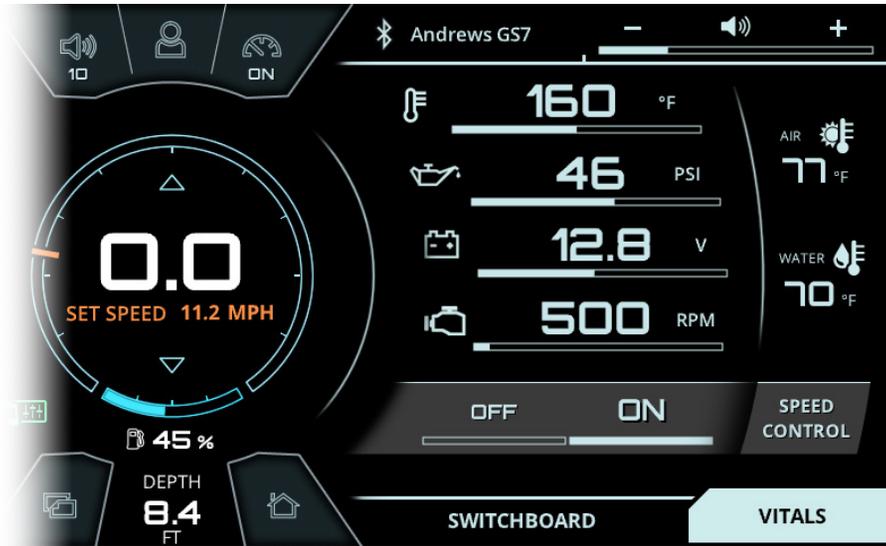


FIG. P4 - SWITCHBOARD TAB ON THE RIGHT SECTION OF THE DISPLAY

## VITALS TAB

This tab displays all of the vital engine gauges and system information for the boat in a large, easy to read format. This includes:

- Engine temperature
- Engine oil pressure
- Battery charging voltage
- Engine RPM
- Air Temperature
- Water Temperature

The tab also includes the Speed Control On/Off so that users can quickly turn that on or off as needed.



WARNING AND POP-UP MESSAGES



FIG. Q1 - ENGINE DIAGNOSTICS ON PREFERENCES MENU

ENGINE DIAGNOSTIC MESSAGE - WARNING

**It is strongly advised that you contact your Nautique dealer immediately when a diagnostic message appears.**

If an engine diagnostic message appears, it will give you the DTC number (Diagnostic Trouble Code) and message, the SPN (Suspect Parameter Number) and FMI (Failure Mode Indicator) number. These numbers follow standards set by the engine manufacturer or SAE J1939.

Pressing Previous or Next will cycle through the diagnostic messages and pressing Ignore will close the diagnostic message window. If ignore is pressed, a smaller message will appear in upper left hand corner of the screen until the problem is corrected (see image below).



WARNING AND POP-UP MESSAGES




FIG. Q2 - ENGINE DIAGNOSTICS ON PREFERENCES MENU

CIRCUIT FAULT MESSAGE - WARNING

**It is strongly advised that you contact your Nautique dealer immediately when a circuit fault appears.**

If a circuit fault message is displayed, a brief description will appear.

Pressing Details will provide more information on the circuit fault and pressing Ignore will close the diagnostic message window. If ignore is pressed, a smaller message will appear in upper left hand corner of the screen until the problem is corrected (see image below).

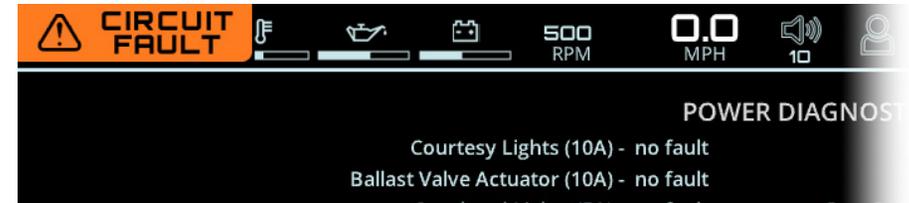



***NAUTIQUE***<sup>®</sup>

14700 Aerospace Parkway • Orlando, FL 32832

1-800-346-2092 • [www.nautique.com](http://www.nautique.com)